

Gigaset

A510H

Congratulations

By purchasing a Gigaset, you have chosen a brand that is fully committed to sustainability. This product's packaging is eco-friendly!

To learn more, visit www.gigaset.com.



GIGASET. INSPIRING CONVERSATION.
MADE IN GERMANY

Gigaset A510H – your high-quality accessory

Congratulations on your purchase of this latest generation Gigaset.

Your Gigaset can do a lot more than just make calls:

Directory for 150 entries

Save phone numbers and names to the directory (→ page 25). You can designate important entries as VIPs (Very Important Persons). VIP calls are then recognised by their ringtone and their background colour (→ page 26).

If you don't (always) want it to ring

Use time control for calls (→ page 32) or ensure that all calls from a withheld number are not signalled (→ page 32).

Other practical information

Transfer the directory from an existing Gigaset handset (→ page 26), use the shortcut function (→ page 26) and adjust the background colour and contrast of the display to your requirements (→ page 31).

Environment

Gigaset Green Home – be environmentally aware when using your phone. For details of our ECO DECT products, visit www.gigaset.com/service.

For more information about your phone, visit www.gigaset.com/gigaset510h.

After purchasing your Gigaset phone, please register it at www.gigaset.com/service – this will ensure any questions you may have or warranty services you request are dealt with even faster!

Have fun using your new phone!

Overview



- 1 **Signal strength** (→ page 15)
Icon changes when Eco Mode+ is activated (→ page 30)
- 2 **Control key** (→ page 17)
Mute microphone (→ page 24)
- 3 **Talk/Handsfree key**
Flashing: incoming call;
Lights up: handsfree mode activated; accept call; open redial list (press briefly); start dialling (press and hold);
During a call: switch between earpiece and handsfree mode (→ page 24)
- 4 **Key 1**
Open the answering machine (dependent on base)/network mailbox (press and hold)
- 5 **Star key**
Activate/deactivate ringtones (press and hold);
With an open connection: switch from pulse dialling to tone dialling (press briefly)
- 6 **Message key** (→ page 27)
Access to calls and message lists;
Flashing: new message or new call
- 7 **Microphone**
- 8 **Recall key**
- Consultation call (flash)
- Insert a dialling pause (press and hold)
- 9 **Hash key**
Keypad lock on/off (press and hold in idle status);
Toggles between upper/lower case and digits
- 10 **End call key, On/Off key**
End call; cancel function; go back one menu level (press briefly); back to idle status (press and hold); activate/deactivate handset (press and hold in idle status)
- 11 **Display keys** (→ page 4)
- 12 **Display in idle status**
- 13 **Charge status of the batteries** (→ page 15)



Please note

To change the **display language**, proceed as described on page 12/page 31.

Display icons

The following icons are displayed depending on the settings and the operating status of your telephone:

Signal strength **📶** (→ page 15)
 or Eco Mode + icon **🔋** (→ page 30)
 Keypad locked (→ page 19)
 Ringtone switched off (→ page 33)
 Batteries are charged (→ page 15)
 Charge status of the batteries (→ page 15)

INT 1 — Name of the handset
23.04. 10:53 — Current day/current time (→ page 14)

INT 1
🕒 12:00 10:53 — Alarm clock switched on and wake up time set (→ page 30)

📧 📞 — Number of new messages:
 ♦ **📧** On the answering machine (dependent on base)/network mailbox (→ page 27)
 ♦ **📞** In the missed calls list (→ page 27)

Redial 🔄 Menu — Display keys (→ page 4)

Display during external call:

📞 ↔ 📞 — Connection established
1234567890 — Number (or name) of caller
00:00:53 — Call duration
Menu — Display key (→ page 4)
 ♦ Set call volume (→ page 31)
 ♦ Access service information

Display keys

Other display icons:

Establishing a connection



Connection established



Connection cannot be established or connection interrupted



External call (→ page 23)



Internal call (→ page 24)



Alarm call (→ page 30)



Please wait...



Information



Query



Action complete

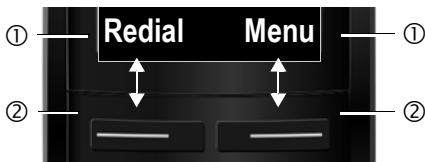


Action failed



Display keys

The functions of the display keys change depending on the particular operating situation. Examples:

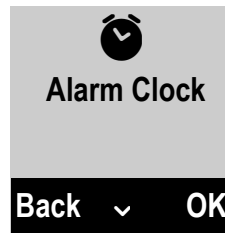





- ① Current display key function
- ② Display keys

Important display keys:

Redial	Open redial list.
Menu	Open a menu for further functions.
OK	Confirm selection.
Del.	Delete key: delete one character at a time from right to left.
Back	Go back one menu level or cancel operation.

Main menu icons



-  Alarm Clock
-  Voice Mail
-  Settings

Information on using the menus (→ page 18)
Menu overview (→ page 22)

Contents

Gigaset A510H – your high-quality accessory	1
Overview	2
Display icons	3
Display keys	4
Main menu icons	4
Safety precautions	7
First steps	8
Checking the package contents	8
Setting up the charger	9
Connecting the charger	9
Setting up the handset for use	10
Changing the display language	12
Registering the handset	13
Setting the date/time	14
What would you like to do next?	16
Using the phone	17
Control key	17
Keys on the keypad	17
Correcting incorrect entries	17
Using the menu	18
Activating/deactivating the handset	19
Activating/deactivating the keypad lock	19
Understanding the operating steps	20
Menu tree	22
Making calls	23
Making an external call	23
Ending a call	23
Accepting a call	23
Handsfree mode	24
Switching to mute	24
Making internal calls	24
Using the directory and lists	25
Directory	25
Redial list	27
Function of the message key	27
Answering machine list (dependent on base)	28
Calls list (dependent on base)	28

Contents

Using the network mailbox	29
Using fast access for the network mailbox	29
Viewing the network mailbox message	29
ECO DECT	30
Using the handset as an alarm clock	30
Setting the handset	31
Changing the display language	31
Setting the display/screensaver	31
Automatically activating/deactivating auto answer	31
Changing the handsfree/earpiece volume	31
Changing ringtones	32
Restoring the handset default settings	33
Service (Customer Care)	34
Questions and answers	35
Authorisation	35
Guarantee Certificate	
United Kingdom	36
Guarantee Certificate	
Ireland	37
Environment	38
Appendix	39
Care	39
Contact with liquid	39
Specifications	39
Writing and editing text	40
Accessories	41
Mounting the charger on the wall	41
Index	42

Safety precautions

Warning

Read the safety precautions and the user manual before use.

Explain their content and the potential hazards associated with using the telephone to your children.



Use only the power adapter supplied, as indicated on the underside of the base.



Use only **rechargeable batteries** that correspond to the **specification provided on page 39**, as this could otherwise result in significant health risks and personal injury.



Using your telephone may affect nearby medical equipment. Be aware of the technical conditions in your particular environment, e.g., doctor's surgery. If you use a medical device (e.g., a pacemaker), please contact the device manufacturer. They will be able to advise you regarding the susceptibility of the device to external sources of high frequency energy. Please refer to the "Appendix" chapter for the specifications of this Gigaset product.



Do not hold the rear of the handset to your ear when it is ringing or when handsfree mode is activated. Otherwise you risk serious and permanent damage to your hearing.

Your Gigaset is compatible with the majority of digital hearing aids on the market. However, perfect function with all hearing aids cannot be guaranteed.

The handset may cause interference in analogue hearing aids. If you require assistance, please contact the hearing aid supplier.



Do not install the charger in bathrooms or shower rooms. The charger is not splash-proof (→ page 39).



Do not use your phone in environments with a potential explosion hazard (e.g., paint shops).



If you give your phone to a third party, make sure you also give them the user manual.



Remove faulty bases from use or have them repaired by our Service team, as these could interfere with other wireless services.

Please note

- ◆ Not all of the functions described in this user guide are available in all countries.
- ◆ The device cannot be used in the event of a power failure. It is also **not** possible to transmit **emergency calls**.

First steps

Checking the package contents



- 1 One Gigaset A510H handset
- 2 Two batteries
- 3 One battery cover
- 4 One charger
- 5 One power adapter
- 6 One user guide

Setting up the charger

The charger is designed for use in dry rooms in a temperature range of +5°C to +45°C.

- ▶ Set up the charger on a level, non-slip surface or mount the charger on the wall (→ page 41).

Please note

Pay attention to the range of the base.

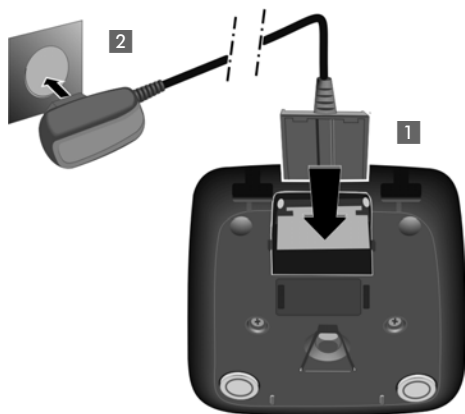
This is up to 300 m in unobstructed outdoor areas and up to 50 m inside buildings. The range is reduced when Eco Mode is activated (→ page 30).

The phone's feet do not usually leave any marks on surfaces. However, due to the multitude of different varnishes and polishes used on today's furnishings, the occurrence of marks on the surfaces cannot be completely ruled out.

Please note:

- ◆ Never expose the telephone to the effects of heat sources, direct sunlight or other electrical devices.
- ◆ Protect your Gigaset from moisture, dust, corrosive liquids and fumes.

Connecting the charger



- ▶ Connect the flat plug from the power adapter **1**.
- ▶ Plug the power adapter into the plug socket **2**.

Should you wish to disconnect the plug from the charger again, press the release button **3** and disconnect the plug **4**.

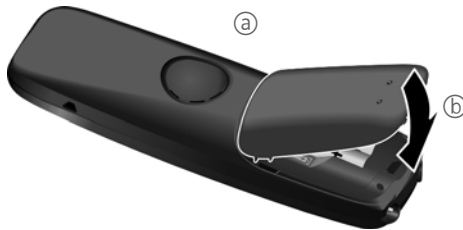


Setting up the handset for use

The display is protected by a plastic film.
Please remove the protective film!

Inserting the battery and closing the battery cover

- ▶ Insert the batteries with the polarity in the correct direction. The polarity is indicated in the battery compartment.



- ▶ First insert the battery cover at the top (a).
- ▶ Then press the cover (b) until it clicks into place.

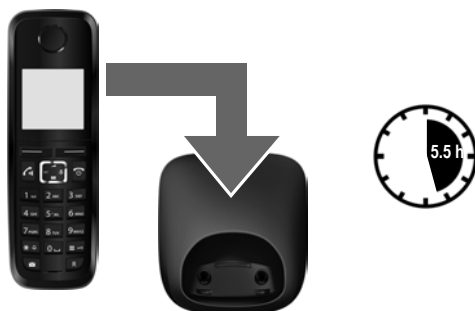
To open the battery cover, for instance to replace the batteries, insert a coin into the cavity on the casing, then pull the battery cover in an upward direction.



Initial charging and discharging of the batteries

The correct charge status can only be displayed if the batteries are first fully charged **and** discharged.

- ▶ Charge the handset in the charger for **5.5 hours**.



Please note

The handset may only be placed in the designated base/charger.

- ▶ After charging, remove the handset from the charger and only replace it when the batteries are **fully discharged**.

Please note

- ◆ After the first battery charge **and** discharge, you may place your handset in the charger after every call.
- ◆ Always repeat the charging and discharging procedure if you remove the batteries from the handset and reinsert them.
- ◆ The batteries may warm up during charging. This is not dangerous.
- ◆ After a while, the charge capacity of the batteries will decrease for technical reasons.



If you have any questions about using your phone, please read the tips on troubleshooting (→ page 35) or contact our Customer Care team (→ page 34).

 
Changing the display language

Change the display language if you do not understand the language currently set.




- ▶ Press right on the control key.

- ▶ Press the keys  and  **slowly** one after the other.



The display for setting languages appears and the current language (e.g., English) is selected



 
- ▶ Press down on the control key  ...




... until the language you wish to use is displayed e.g., French.

- ▶ Press the key below **OK** to select this language.



The selection is marked with .

- ▶ Press and **hold** the end call key  to return to idle status.

Registering the handset

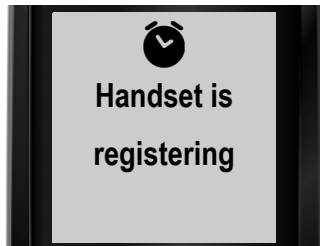
Before you can use the phone, you must first register the handset to the base. The registration procedure will depend on the type of base.

Automatically registering the A510H handset to the Gigaset A510/A510A base

Prerequisite: The handset must not already be registered to a base.



- ▶ Place the handset with the **display facing up** in the base.



The handset registers automatically. Registration can take **up to 5 minutes**. **Do not remove the handset from the base during this time.**

Please note

- ◆ Each key press interrupts automatic registration.
- ◆ If the handset is already registered to a base or if automatic registration does not work, the handset will have to be registered manually.

Manually registering the A510H handset

You must manually register the handset on both the handset (1) and the base (2).

1) On the handset

Menu ▶ **Settings** ▶ **Registration** ▶ **Register Handset**



If required, enter the system PIN for the base (the default is 0000).



Press the display key.

The display shows **Handset is registering**.

2) On the base

- ▶ Within 60 seconds, press and **hold** the registration/paging key on the base (approx. 3 seconds).

First steps

Once registration is complete, the handset returns to idle status. The handset's internal number is shown in the display e.g., INT 2. If not, repeat the procedure.

Please note

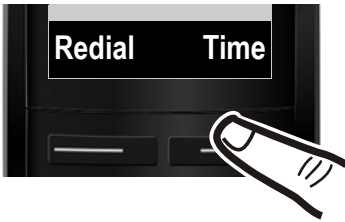
For instructions on de-registering the handsets, please consult the base user guide.

Setting the date/time

Set the date and time so that the correct date and time can be assigned to incoming calls, and so that the alarm can be used.

 
Please note

Depending on your network provider, the date and time may be displayed automatically.

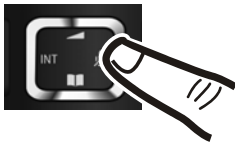


- ▶ Press the key below **Time** on the display screen to open the input field.
(If you have already set the date/time, open the input field via the menu → page 22.)

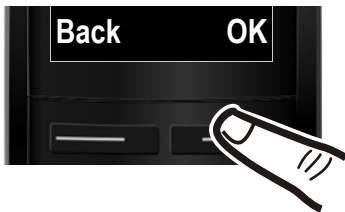
The **Date/Time** submenu is shown on the display.



- ▶ The active input position flashes.
Enter the day, month and year as an 8-digit number via the keypad
e.g.,
for 4 April 2011.



To change the input position e.g., to correct an entry, press **right** or **left** on the control key.

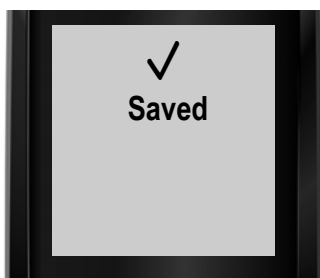


- ▶ Press the key below **OK** on the display screen to save your entry.



- ▶ Enter the hours and minutes in 4-digit format via the keypad e.g., [0] [7] [1] [5] for 07:15 am. Change the input position with the control key if necessary.

- ▶ Confirm with **OK**.



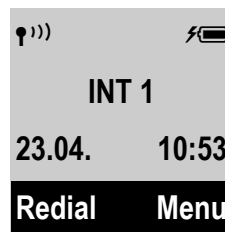
The display shows **Saved**. You will hear a confirmation tone and the handset automatically reverts to idle status, or returns to the "Settings" menu if the setting was made via the menu.

Display in idle status

Once the phone is registered and the time set, the screen display appears as follows (example).

Screen display

- ◆ Reception between the base and the handset:
 - Good to poor: 📶 📶 📶 📶
 - No reception: 📶
- ◆ Charge status of the batteries:
 - 🔋 Charged over 66%
 - 🔋 Charged between 34% and 66%
 - 🔋 Charged between 11% and 33%
 - 🔋 Charged below 11%
 - 🔋 Flashes: battery almost empty (less than 10 minutes talktime)
 - 🔌 🔌 🔌 🔌 Illuminated: batteries charging
- ◆ INT 1
Internal name of the handset








If **Eco Mode+** (→ page 30) is activated, the 📶 icon is displayed in the top left corner of the display.

Your phone is now ready for use.


What would you like to do next?

Now that you have successfully set up your Gigaset, you can immediately start calling – or you can adapt it to your personal requirements. Use the following guide to quickly locate the most important functions.

Information on is located here.
Using the phone	 page 17
Setting ringtones	 page 32
Transferring directory entries from existing Gigaset handsets to new handset(s)	 page 26
Setting Eco Mode / Eco Mode+	 page 30
Setting the earpiece volume	 page 31

Using the phone





Control key

In the description below, the side of the control key (up, down, right, left) that you have to press in the different operating situations is marked in black e.g.,  for "press the right edge of the control key".



The control key has a number of different functions:







When the handset is in idle status

-  Open the main menu.
-  Open the directory.
-  Open the list of handsets.
-  Call up the menu for setting the handset's call volume (→ page 31).





In menus and lists

- / Scroll up/down line by line.

 
 
 

In input fields

You can use the control key to move the cursor up , down , right  or left .

During an external call

-  Mute the microphone.
-  Open the directory.
-  Initiate an internal consultation call.
-  Adjust the loudspeaker volume for earpiece and handsfree mode.

Keys on the keypad

- // etc.
Press the corresponding key on the handset.
-  Enter digits or letters.

Correcting incorrect entries


You can correct incorrect characters in the input fields by navigating to the incorrect entry using the control key. You can then:

- ◆ Use the display key **Del.** to delete the character to the left of the cursor
- ◆ Insert characters at the cursor position
- ◆ Overwrite the highlighted (flashing) character e.g., when entering time and date.

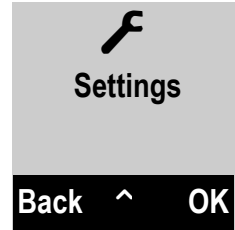
Using the menu

Your telephone's functions are accessed via a menu consisting of several levels (menu overview → page 22).



Main menu (first menu level)



- ▶ With the handset in idle status, press the display key **Menu** or right on the control key  to open the main menu.

The functions in the main menu are displayed in the form of a list with names and icons (example on the right).



Selecting a function


- ▶ You can scroll between functions using the control key . The selectable function is shown in the display.
- ▶ Press the display key **OK** or right on the control key  to select the displayed function. This opens the corresponding submenu and the first entry is displayed.

 
If you press the display key **Back**, left on the control key  or **briefly** press the end call key , the display returns to idle status.

Submenus

The functions in the submenu are displayed with the corresponding names.

Selecting a function


- ▶ You can scroll between functions using the control key . The relevant function is shown in the display.
- ▶ Press the display key **OK** to select the displayed function. This opens the corresponding submenu and the first entry is displayed.

If you press the display key **Back** or **briefly** press the end call key , you return to the previous menu level or cancel the operation.

Any settings you have not confirmed by pressing **OK** will be discarded.

Reverting to idle status

From any point in the menu:

- ▶ Press and **hold** the end call key  or
- ▶ Do not press any key: after 2 minutes, the display will **automatically** revert to idle status.

An example of the display in idle status is shown on page 15.

Activating/deactivating the handset




In idle status, press and **hold** the end call key (confirmation tone).

Activating/deactivating the keypad lock

The keypad lock prevents any inadvertent use of the phone.



In idle status, press and **hold** the hash key (confirmation tone). The keypad lock is activated or deactivated. When the keypad lock is activated, the  icon appears in the display.

If the keypad lock is activated, a corresponding message is displayed when you press a key.

The keypad lock deactivates automatically when you receive a call. It is reactivated when the call is finished.

Please note

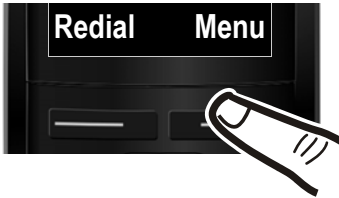
When the keypad lock is active, you cannot call emergency numbers.

Understanding the operating steps

The operating steps are shown in abbreviated form, for example:


Menu ▶ **Settings** ▶ **Eco Mode+** (☑ = on)

▶ This means you should proceed as follows:



▶ Press the key below **Menu** on the display screen to open the main menu.




▶ Press down on the control key  ...



... until the **Settings** menu item appears.

▶ Press the key below **OK** on the display screen to confirm your selection.



▶ Press down on the control key  ...



... until the **Eco Mode+** menu item appears.

- ▶ Press the key below **OK** on the display screen to switch the function on or off (✓ = on).

- ▶ Press the key below **Back** on the display screen to jump back to the previous menu level.

Or

Press and **hold** the end call key (📞) to return to idle status.

Menu tree

The menu entries are divided into sections. The page numbers refer to the relevant description in the user guide.

To open the main menu: press the **Menu** display key when the phone is in idle mode.

Alarm Clock

Activation	→ page 30
Wake up time	→ page 30

Voice Mail (Menu dependent on base)



Settings

Date/Time	→ page 14	
Audio Settings	Call Volume	→ page 31
	Ringer Volume	→ page 32
	Advisory Tones	→ page 33
	Battery Low	→ page 33
	Ringtones (Handset)	→ page 32
	Ringtones (Base)	(dependent on base)
Display	Screensaver	→ page 31
	Colour Schemes	→ page 31
	Contrast	→ page 31
Language	→ page 31	
Registration	Register Handset	→ page 13
	De-register Handset	(dependent on base)
Telephony	Auto Answer	→ page 31 (further submenus dependent on base)
System	Reset Handset	→ page 33 (further submenus dependent on base)
Eco Mode	→ page 30	
Eco Mode+	→ page 30	




Making calls

 
Making an external call

External calls are calls using the public telephone network.

  Enter the number and press the talk key.

Or:

  Press and **hold** the talk key  and then enter the number.


You can cancel the dialling process with the end call key .

You are shown the duration of the call while the call is in progress.


Please note


Dialling with the directory (→ page 25), calls list (→ page 28) and redial list (→ page 27) saves you from repeatedly keying in phone numbers.

Ending a call

 Press the end call key.

Accepting a call

The handset indicates an incoming call in three ways: by ringing, by a display on the screen and by the flashing talk key .

To accept the call, press the talk key .

If the handset is in the charger and the **Auto Answer** function is activated (→ page 31), the handset automatically answers calls when you remove it from the base/charger.

If the ringer is intrusive, you can deactivate it:

Menu ▶ **Silent** ▶ **OK**

You can accept the call as long as it is displayed on the screen.

Handsfree mode


In handsfree mode, you activate the loud-speaker so that you can hear the caller without having to hold the handset to your ear. You therefore have both hands free and other people can listen in on the conversation.

Please note


Inform your caller before you use the handsfree function so that the caller knows a third party may be listening.

Activating/deactivating handsfree mode

During a call, activate or deactivate handsfree mode:

-  Press the handsfree key. Each key press switches between earpiece and handsfree mode. If handsfree mode is activated, the key is lit up.


If you wish to place the handset in the charger during a call:

- ▶ Press and hold the handsfree key  while placing the handset in the base/charger and for a further 2 seconds.

For instructions on adjusting the handsfree volume, see page 31.

Switching to mute






You can deactivate your handset's microphone during a call.

-  Press **right** on the control key to mute the handset. The display shows **Microphone is switched off**. Press the key again to unmute the microphone.



 


Making internal calls

Internal calls are free calls between handsets that are registered with the same base.


Calling a specific handset

-  Initiate internal call.
-  Enter the number of the handset.
- Or:**
-  Initiate internal call.
-  Select handset.
-  Press the talk key.

Calling all handsets ("group call")

-  Press and **hold**.
- Or:**
-  Initiate internal call.
-  Press the star key.
- Or:**
-  Initiate internal call.
- Call All** Select
-  Press the talk key.
- All handsets are called.

Ending a call

-  Press the end call key.

Using the directory and lists

The options are:

- ◆ Directory
- ◆ Redial list
- ◆ Calls lists
- ◆ Answering machine list (dependent on base)/network mailbox list

You can create a personalised directory for your own individual handset. You can also send lists/entries to other handsets (→ page 26).

Directory


You can save a total of 150 entries in the directory.

Please note

To quickly access a number from the directory (shortcut), you can assign the number to a key (→ Using shortcut keys, page 26).

In the **directory**, you can save

- ◆ Numbers and corresponding names
- ◆ VIP ringtones and colours.


You open the directory in idle status using the  key.


Length of the entries

Number: max. 32 digits
Name: max. 16 characters

Saving the first number in the directory


 ▶ Dir. empty New Entry?


 Enter the number and press **OK**.

 Enter the name and press **OK**.

Storing a number in the directory

 ▶ **Menu** ▶ New Entry

 Enter the number and press **OK**.

 Enter the name and press **OK**.

Order of directory entries

Directory entries are generally sorted alphabetically by surname. Spaces and digits take first priority.

The sort order is as follows:



1. Space
2. Digits (0–9)
3. Letters (alphabetical)
4. Other characters

To work round the alphabetical order of entries, insert a space or a digit before the first letter of the name. These entries will then move to the beginning of the directory.

Selecting directory entries

 Open the directory.

You have the following options:

- ◆ Use  to scroll through the entries until the required name is selected.
- ◆ Enter the first character of the name, if necessary scroll to the entry with the  key.

Dialling with the directory


 ▶  (Select entry)

 Press the talk key.


Managing directory entries

 ▶  (Select entry)


Menu Press the display key.

The following functions can be selected with :

VIP Caller Melody

Mark a directory entry as a VIP (Very Important Person) by assigning a specific ringtone to it. The entry is flagged with the  icon in the directory. You recognise VIP calls by the ringtone.

VIP Caller Colour


Mark a directory entry as a VIP (Very Important Person) by assigning a specific background colour to it. The entry is displayed with this background colour in the address book and marked with the  icon. VIP calls are then recognised by their background colour.

Edit Entry

Edit the number if required and press **OK**.

Edit the name if required and press **OK**.

Use Number

Edit or add to a saved number and then use  to dial the number or save the number as a new entry;

To do so, display the number and press:

Menu ▶ **Copy to Directory** ▶ **OK**

Delete Entry

Delete selected entry.

Send Entry

Send a single entry to a handset
(→ Transferring the directory to another handset, page 26).

Delete List

Delete **all** directory entries.

Send List

 
 
Send the entire directory to a handset
(→ Transferring the directory to another handset, page 26).




Shortcut

Assign the current entry to a shortcut key
(→ next section "Using shortcut keys").

Using shortcut keys

You can assign directory entries to the keys

 and :

 ▶  (select entry) ▶ **Menu** ▶ **Shortcut**
▶  (press the key you want to assign the number to)

In idle status, press and **hold** the required shortcut key to **dial**.


Transferring the directory to another handset

You can transfer directory entries from other handsets to your new handset — even entries from old handsets.

Prerequisites:

- ◆ The sending and receiving handsets must both be registered to the same base.
- ◆ The other handset and the base can send and receive directory entries.

 ▶  (Select entry) ▶ **Menu** (Open menu)
▶ **Send Entry / Send List**

 Select the internal number of the receiving handset and press **OK**.

You can transfer several individual entries one after the other by responding to the **Entry copied. Next entry?** prompt with **OK**.

A message appears on the display to confirm a successful transfer. You will hear the confirmation tone.

Please note:

- ◆ Entries with identical numbers are not overwritten on the receiving handset.
- ◆ The transfer is cancelled if the phone rings or if the memory of the receiving handset is full.
- ◆ VIP melodies and colours assigned to entries are not transferred.

Adding a displayed number to the directory

You can copy numbers displayed in a list, e.g., the calls list or redial list, to the directory.



A number is displayed:

Menu ▶ Copy to Directory

- ▶ Complete the entry (→ Storing a number in the directory, page 25).

Copying a number from the directory




In some operating situations, you can open the directory to copy a number (e.g., during an external call or in pre-dialling mode). Your handset need not be in idle status.

-  Open the directory.
-  Select an entry and press **OK**.



Redial list


The redial list contains the ten numbers last dialled with the handset (max. 32 numbers). If one of the numbers is in the directory, the corresponding name will be displayed.

Manual redial

-  Press the talk key **briefly**
- Or**
- Redial** Press the display key.
-  Select entry.
-  Press the talk key. The number is dialled.

Managing entries in the redial list

-  Press the talk key **briefly**
- Or**
- Redial** Press the display key.
-  Select entry.
- Menu** Open menu.

The following functions can be selected with :

Use Number

(As in the directory, → page 26)

Copy to Directory (→ Storing a number in the directory, page 25)

Delete Entry


Delete selected entry.

Delete List

Delete **all** entries in the redial list.

Function of the message key

Opening lists



Use the message key  to open the following lists:

- ◆ Answering machine list (dependent on base) or network mailbox, if your network provider supports this function and fast access is set for the network mailbox (→ page 29).

 
- ◆ Calls list

An advisory tone sounds as soon as a **new entry** arrives in a list.

Depending on the type of the new entry, an icon appears in the display while in **idle status**:

- Icon** **New message ...**
-  ... in the answering machine list (dependent on base) or on the network mailbox
-  ... in the **missed calls** list


The number of **new** entries is displayed under the corresponding icon.



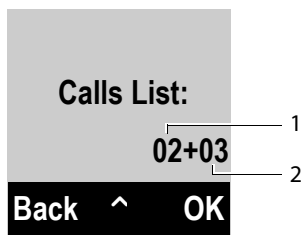
Using the directory and lists

Please note

If calls are saved on the network mailbox, you will receive a message if the list type has been set accordingly (see your network provider user guide).


After pressing the message key , you can see all lists containing messages and the network mailbox list.

The list is displayed with the number of new entries (1) and the number of old, read entries (2) (example):


 
 
 
 
 



Select a list with . To open, press **OK**.

Activating/deactivating flashing message key (dependent on base)

You can specify whether you want the message key  to flash for new messages (default setting). Proceed as follows:

 
- ▶ Press the following keys in sequence:

 
 ▶      

You will see:

97

 
 
- ▶ Press one of the following keys to select the type of message:

 
 For missed calls

Or  For messages on the answering machine (dependent on base)/ network mailbox

Your selection is displayed (e.g., 5 for missed calls), the current setting flashes:

975 SET: [0]

- ▶ Press  or  to determine the setting for new messages:

 The message key flashes (it goes off when the key is pressed)

Or  The message key does not flash

Your selection is displayed (e.g., 1):

975 SET: [1]

- ▶ Press the display key **OK**.

Answering machine list (dependent on base)


You can use the **answering machine list** to listen to the messages that are on the answering machine.


Calls list (dependent on base)

Prerequisite: Calling Line Identification Presentation (CLIP)

Depending on the base, the calls list contains:

- ◆ All calls
 - Accepted calls
 - Unanswered calls
 - Calls recorded by the answering machine
- ◆ Or missed calls only
 - Unanswered calls
 - Calls not recorded by the answering machine

In idle status, you can open the calls list by pressing the message key .

To return a call, select the corresponding entry and press the talk key .

See your base user guide for further information.

 
Using the network mailbox

The network mailbox is your provider's voice mail feature within the network. More information is available from your provider.

You cannot use the network mailbox unless you have **requested** it from your provider.

The following information is only applicable when using your handset with a Gigaset A510 base. If you have registered your handset to a different base, such as the Gigaset A510A, please refer to your base user guide.

Using fast access for the network mailbox

To access the network mailbox, simply **press and hold** the  key – you do not have to select it via the menu.

You only need to enter the number of the network mailbox.

Menu ▶ **Voice Mail**


▶ **Network Mailbox** = selected)



Enter the network mailbox number and press **OK**.

The setting for fast access applies to all handsets.

Calling the network mailbox

 Press and hold. You are connected straight to the network mailbox.

Please note

You can also connect to the network mailbox via the menu:

Menu ▶ **Voice Mail** ▶ **Play Messages**

Viewing the network mailbox message

When a message is recorded, you receive a call from the network mailbox. If you have requested Calling Line Identification, the network mailbox number is displayed. If you accept the call, the new messages are played back. If you do not accept the call, the network mailbox number is saved in the missed calls list and the message key flashes (→ page 27).

Please note

Enter the network mailbox phone number into your directory along with the designation "Network mailbox"; the display and the calls list will then show this designation.

ECO DECT

You are helping to protect the environment with your Gigaset.

Reducing energy consumption

Your telephone has a power-saving adapter plug and uses less power.

Reducing radiation (dependent on base)

The radiation can only be reduced if your base supports this function.

The telephone's transmission power is **automatically** reduced depending on the distance to the base.

You can reduce the radiation from the handset and base even more by using **Eco Mode** or **Eco Mode+**. For further information, please refer to your base user guide.


Using the handset as an alarm clock

Prerequisite: The date and time have already been set (→ page 14).

Activating/deactivating the alarm clock

Menu ▶ Alarm Clock ▶ Activation (☑ = on)

After you activate the alarm clock, the menu for setting the wake up time opens automatically.

The  icon and wake up time are shown on the display.

A wake up call is signalled on the display (→ page 3), with the selected ringer volume and melody (→ page 32). The wake up call sounds for 60 seconds. If no key is pressed, the wake up call is repeated twice at five minute intervals and then switched off.

During a call, the wake up call is only signalled by a short tone.

Setting the wake up time

Menu ▶ Alarm Clock ▶ Wake up time



Enter the wake up time in hours and minutes, then press **OK**.

Deactivating the wake up call/ repeating after a pause (snooze mode)

Prerequisite: A wake up call is sounding.

Off

Press the display key. The wake up call is deactivated.

Or

Snooze

Press the display key or any key. The wake up call is deactivated and then repeated after 5 minutes. After the second repetition the wake up call is deactivated completely.

Setting the handset


Your handset comes with default settings, but you can change the settings to suit your individual requirements.

Changing the display language

You can view the display texts in different languages.


Menu ▶ **Settings** ▶ **Language**

The current language is indicated by .

 Select a language and press **OK**.

If you accidentally choose a language you do not understand:

 ▶  6  4 

 Select the correct language and press **OK**.

Setting the display/ screensaver

You have a choice of four colour schemes and several different contrasts. You can also configure a screensaver.


Menu ▶ **Settings** ▶ **Display**

You have the following options:

Screensaver

In idle status a digital clock can be displayed as a screensaver. This replaces the idle status display. You can choose between **No Screensaver** and **Digital Clock**.

The screensaver is not displayed in certain situations e.g., during a call or if the handset is de-registered.

To show the display in idle status, briefly press the end call key .


Colour Schemes

You can view the display backlight in different colours. Four colour schemes are available.

Contrast


Nine contrast settings are available.

Automatically activating/ deactivating auto answer

If this function is activated, you can simply lift the handset out of the charger without having to press the talk key  when you receive a call.

Menu ▶ **Settings** ▶ **Telephony**

▶ **Auto Answer**

OK Press the display key ( = on).

Changing the handsfree/ earpiece volume



You can set the volume for handsfree mode and earpiece mode to five different levels.

In idle status:

 ▶ **Call Volume**



Earpiece Volume / Handsfree Volume

Select and press **OK**.

 Set the volume (e.g., volume 3 = .

OK Press the display key to save the setting.

During a conversation via the earpiece or in handsfree mode:

 Press the control key to open the menu for setting the volume. Set the earpiece or handsfree volume by pressing .

The setting will automatically be saved after approximately 3 seconds or press the display key **OK**.

Please note

You can also set the call volume using the menu (→ page 22).

Changing ringtones

- ◆ **Volume:**
You can choose between five volumes (e.g., volume 3 =) and the "crescendo" ring (volume increases with each ring, volume 6 =).
- ◆ **Ringtones:**
You can select from a list of pre-loaded ringtones and melodies.

You can set different ringtones for the following functions:

- ◆ Internal calls
- ◆ External calls
- ◆ Alarm clock

Setting the ringer volume

The ringer volume is the same for all types of ring.

In idle status:

▶ **Ringer Volume**

Set the volume.

OK Press the display key to save the setting.

Please note

You can also adjust the ringer volume via the menu (→ page 22).

Setting ringtones

Set different ringtones for external calls, internal calls and the alarm clock.

For internal calls and the alarm clock

In idle status:

▶ **Ringtones (Handset)**

Internal Calls / Alarm Clock

Select and press **OK**.

Select melody and press **OK**
(= selected).

For external calls:

In idle status:

▶ **Ringtones (Handset)**

External Calls

Select and press **OK**.

can be used to select the following:

Melodies

You can set the ringtone as described above.

Time Control

You can specify a time period when you do not want the telephone to signal external calls e.g., during the night.

Activation is switched on or off by pressing **OK** (= activated).

Settings

Ringer off from: /Ringer off until:

Enter time in 4-digit format.

Please note

During this period, you will continue to receive calls from numbers to which you have assigned a personalised melody/background colour in the directory (VIP).

Anonymous Calls Silent

You can set your handset so that it doesn't ring for calls where Calling Line Identification has been withheld. The call will only be signalled on the display.

Switch the **Anonymous Calls Silent** function on or off by pressing **OK**
(= activated).

Please note

You can also set the ringtones via the menu (→ page 22).

 
Activating/deactivating the ringer

You can:

- ◆ Permanently deactivate the ringer in idle status or when receiving a call
- ◆ Deactivate the ringer for the current call only.

 
The ringer cannot be re-activated while a call is in progress.

Deactivating the ringer permanently

 Press and **hold** the star key.

The  icon appears in the display.

Reactivating the ringer

 Press and **hold** the star key.

Deactivating the ringer for the current call


Menu ▶ **Silent** ▶ **OK**


Activating/deactivating advisory tones/battery warning tones

Your handset uses advisory tones to tell you about different activities and statuses. These can be activated and deactivated independently of each other:

- ◆ **Advisory Tones**
 - **Confirmation tone:** at the end of an entry/setting and when a new entry arrives in the calls list
 - **Error tone:** when you make an incorrect entry
 - **Key click:** every key press is confirmed.
- ◆ **Battery Low**

The battery requires charging.

 ▶ **Advisory Tones / Battery Low**

Select and press **OK** to activate or deactivate ( = activated).

The **menu end tone** when scrolling at the end of a menu cannot be deactivated.

Restoring the handset default settings

You can reset any individual settings and changes that you have made.

The following settings are **not** affected by a reset:

- ◆ Registering the handset to the base
- ◆ Date/time
- ◆ Entries in the directory, calls lists

Menu ▶ **Settings** ▶ **System** ▶ **Reset Handset**

OK Confirm prompt.

Service (Customer Care)

You have questions? As a Gigaset customer, you can take advantage of our comprehensive service offerings. You can find help quickly in this User Manual and in the service pages of our Gigaset online portal.

Please register your phone right after purchase.

This enables us to provide you with even better service regarding questions or a warranty claim. Your personal user account enables you to directly contact our customer service by email.

Our representatives are available on the telephone hotlines for more advanced questions or immediate consultation.

United Kingdom

www.gigaset.com/uk/service

Service Hotline: 0845 367 0812

(local call cost charge)

Ireland

www.gigaset.com/ie/service

Service Hotline: 1850 777 277

(6.6561 Ct./Call)

Please note that if the Gigaset product is not sold by authorised dealers in the national territory the product may not be fully compatible with the national telephone network. It is clearly specified on the box near the CE mark for which country/countries the equipment has been developed. If the equipment is used in a manner inconsistent with this advice or with the instructions of the manual and on the product itself, this may have implications on the conditions for warranty or guarantee claims (repair or exchange of product).


In order to make use of the warranty, the product purchaser is asked to submit a receipt which proves the date of purchase (date from which the warranty period starts) and the type of goods that have been purchased.

Questions and answers

If you have any queries about the use of your telephone, visit our website at www.gigaset.com/service for assistance 24/7.

The table below also lists steps for troubleshooting.

The display is blank.

1. The handset is not activated.
 - › Press and **hold** the end call key .
2. The battery is empty.
 - › Charge the battery or replace it (→ page 10).

"Base" flashes on the display.

1. The handset is outside the range of the base.
 - › Move the handset closer to the base.
2. The base's range is reduced because Eco Mode is activated.
 - › Deactivate Eco Mode (→ page 30) or reduce the distance between the handset and the base.
3. The base is not activated.
 - › Check the base power adapter.
4. Handset has not been registered with the base or has been de-registered.
 - › Register the handset (→ page 13).


The handset does not ring.

1. The ringtone is switched off.
 - › Activate the ringtone (→ page 33).
2. The phone only rings if the phone number has been transferred.
 - › Activate the ringtone for anonymous calls (→ page 32).

The connection always terminates after approx. 30 seconds.

- Repeater activated/deactivated.
- › Activate/deactivate the handset (→ page 19).

The other party cannot hear you.

- You pressed the mute key  during a call. The handset is "muted".
- › Unmute the microphone (→ page 24).

The number of the caller is not displayed although CLIP has been set.

- Calling Line Identification is not enabled.
- › **The caller** should ask the network provider to enable Calling Line Identification (CLI).

You hear an error tone when keying an input.

- Action has failed/invalid input.
- › Repeat the process.
Watch the display and refer to the user manual if necessary.

Exclusion of liability

Some displays may contain pixels (picture elements), which remain activated or deactivated. This is completely normal and does not indicate a fault.

Authorisation

This device is intended for use within the European Economic Area and Switzerland. If used in other countries, it must first be approved nationally in the country in question.

Country-specific requirements have been taken into consideration.

We, Gigaset Communications GmbH, declare that this device meets the essential requirements and other relevant regulations laid down in Directive 1999/5/EC.

A copy of the 1999/5/EC Declaration of Conformity is available at this Internet address: www.gigaset.com/docs

 **0682**

Guarantee Certificate

United Kingdom

Without prejudice to any claim the user (customer) may have in relation to the dealer or retailer, the customer shall be granted a manufacturer's Guarantee under the conditions set out below:

- ◆ In the case of new devices and their components exhibiting defects resulting from manufacturing and/or material faults within 24 months of purchase, Gigaset Communications shall, at its own option and free of charge, either replace the device with another device reflecting the current state of the art, or repair the said device. In respect of parts subject to wear and tear (including but not limited to, batteries, keypads, casing), this warranty shall be valid for six months from the date of purchase.
- ◆ This Guarantee shall be invalid if the device defect is attributable to improper treatment and/or failure to comply with information contained in the user guides.
- ◆ This Guarantee shall not apply to or extend to services performed by the authorised dealer or the customer themselves (e. g. installation, configuration, software downloads). User guides and any software supplied on a separate data medium shall be excluded from the Guarantee.
- ◆ The purchase receipt, together with the date of purchase, shall be required as evidence for invoking the Guarantee. Claims under the Guarantee must be submitted within two months of the Guarantee default becoming evident.
- ◆ Ownership of devices or components replaced by and returned to Gigaset Communications shall vest in Gigaset Communications.

- ◆ This Guarantee shall apply to new devices purchased in the European Union. For Products sold in the United Kingdom the Guarantee is issued by: Gigaset Communications UK Limited, Quatro House, Lyon Way, Camberley, Surrey, GU16 7ER.
- ◆ Any other claims resulting out of or in connection with the device shall be excluded from this Guarantee. Nothing in this Guarantee shall attempt to limit or exclude a Customers Statutory Rights, nor the manufacturer's liability for death or personal injury resulting from its negligence.
- ◆ The duration of the Guarantee shall not be extended by services rendered under the terms of the Guarantee.
- ◆ Insofar as no Guarantee default exists, Gigaset Communications reserves the right to charge the customer for replacement or repair.
- ◆ The above provisions does not imply a change in the burden of proof to the detriment of the customer.

To invoke this Guarantee, please contact the Gigaset Communications telephone service. The relevant number is to be found in the accompanying user guide.

Guarantee Certificate Ireland

Without prejudice to any claim the user (customer) may have in relation to the dealer or retailer, the customer shall be granted a manufacturer's Guarantee under the conditions set out below:

- ◆ In the case of new devices and their components exhibiting defects resulting from manufacturing and/or material faults within 24 months of purchase, Gigaset Communications shall, at its own option and free of charge, either replace the device with another device reflecting the current state of the art, or repair the said device. In respect of parts subject to wear and tear (including but not limited to, batteries, keypads, casing), this warranty shall be valid for six months from the date of purchase.
- ◆ This Guarantee shall be invalid if the device defect is attributable to improper care or use and/or failure to comply with information contained in the user manuals. In particular claims under the Guarantee cannot be made if:
 - ◆ The device is opened (this is classed as third party intervention)
 - ◆ Repairs or other work done by persons not authorised by Gigaset Communications.
 - ◆ Components on the printed circuit board are manipulated
 - ◆ The software is manipulated
 - ◆ Defects or damage caused by dropping, breaking, lightning or ingress of moisture. This also applies if defects or damage was caused by mechanical, chemical, radio interference or thermal factors (e.g.: microwave, sauna etc.)
 - ◆ Devices fitted with accessories not authorised by Gigaset Communications
- ◆ This Guarantee shall not apply to or extend to services performed by the authorised dealer or the customer themselves (e.g. installation, configuration, software downloads). User manuals and any software supplied on a separate data medium shall be excluded from the Guarantee.
- ◆ The purchase receipt, together with the date of purchase, shall be required as evidence for invoking the Guarantee. Claims under the Guarantee must be submitted within two months of the Guarantee default becoming evident.
- ◆ Ownership of devices or components replaced by and returned to Gigaset Communications shall vest in Gigaset Communications.
- ◆ This Guarantee shall apply to new devices purchased in the European Union. For Products sold in the Republic of Ireland the Guarantee is issued by Gigaset Communications UK Limited, Quatro House, Lyon Way, Camberley, Surrey, GU16 7ER.
- ◆ Any other claims resulting out of or in connection with the device shall be excluded from this Guarantee. Nothing in this Guarantee shall attempt to limit or exclude a Customers Statutory Rights, nor the manufacturer's liability for death or personal injury resulting from its negligence.
- ◆ The duration of the Guarantee shall not be extended by services rendered under the terms of the Guarantee.
- ◆ Insofar as no Guarantee default exists, Gigaset Communications reserves the right to charge the customer for replacement or repair.
- ◆ The above provisions does not imply a change in the burden of proof to the detriment of the customer.

To invoke this Guarantee, please contact the Gigaset Communications helpdesk on 1850 777 277. This number is also to be found in the accompanying user guide.

Environment

Our environmental mission statement

We, Gigaset Communications GmbH, bear social responsibility and are actively committed to a better world. Observing our ecological responsibilities is paramount in every aspect of our work — from product and process design to production and sales or even disposal.

Further information on environmentally friendly products and processes is available on the Internet at www.gigaset.com.

Environmental management system



Gigaset Communications GmbH is certified pursuant to the international standards EN 14001 and ISO 9001.

ISO 14001 (Environment): Certified since September 2007 by TÜV SÜD Management Service GmbH.

ISO 9001 (Quality): Certified since 17/02/1994 by TÜV SÜD Management Service GmbH.

Ecological energy consumption

The use of ECO DECT (→ page 30) saves energy and makes an active contribution towards protecting the environment.

Disposal

Batteries should not be disposed of in general household waste. Observe the local waste disposal regulations, details of which can be obtained from your local authority.

All electrical and electronic products should be disposed of separately from the municipal waste stream via designated collection facilities appointed by the government or the local authorities.



This crossed-out wheeled bin symbol on the product means the product is covered by the European Directive 2002/96/EC.

The correct disposal and separate collection of your old appliance will help prevent potential negative consequences for the environment and human health. It is a precondition for reuse and recycling of used electrical and electronic equipment.

For more detailed information about disposal of your old appliance, please contact your local council refuse centre or the original supplier of the product.

Appendix

Care

Wipe the base station, charging cradle and handset with a **damp** cloth (do not use solvent) or an antistatic cloth.

Never use a dry cloth. This can cause static.

Impairments in high-gloss finishes can be carefully removed using display polishes for mobile phones.

Contact with liquid

If the handset has come into contact with liquid:

1. **Switch off the handset and remove the battery pack immediately.**
2. Allow the liquid to drain from the handset.
3. Pat all parts dry, then place the handset with the battery compartment open and the keypad facing down in a dry, warm place **for at least 72 hours** (not in a microwave, oven etc.).
4. **Do not switch on the handset again until it is completely dry.**

When it has fully dried out, you will normally be able to use it again.

Specifications

Batteries

Technology: Nickel-metal-hydride (NiMH)

Size: AAA (Micro, HR03)

Voltage: 1.2 V

Capacity: 550 - 1000 mAh

The device is supplied with two approved batteries.

Handset operating times/charging times

This Gigaset can charge batteries up to a capacity of 1000 mAh. Using special high-performance batteries or batteries with high capacities is not recommended for cordless phones.

The operating time of your Gigaset depends on the capacity and age of the batteries and the way it is used. (Standby times/talktimes/operating times are maximum possible times, charging times are typical values).

	Capacity (mAh) approx.			
	550	700	800	1000
Standby time (hours)	220	255	290	360
Talktime (hours)	20	23	27	33
Operating time for 1.5 h of calls per day (hours)				
- Without Eco Mode+	135	155	180	255
- With Eco Mode+	95	110	130	155
Charging time in base (hours)	6	7	8	10
Charging time in charger (hours)	5.5	6.5	7	9

Due to the constant progression in battery development, the list of recommended batteries in the FAQ section of the Gigaset Customer Care pages is updated regularly:





www.gigaset.com/service

General specifications

DECT standard	Supported
GAP standard	Supported
No. of channels	60 duplex channels
Radio frequency range	1880–1900 MHz
Duplex method	Time multiplex, 10 ms frame length
Repeat frequency of the transmission pulse	100 Hz
Length of the transmission pulse	370 µs
Channel grid	1728 kHz
Bit rate	1152 kbit/s
Modulation	GFSK
Language code	32 kbit/s
Transmission power	10 mW average power per channel, 250 mW pulse power
Range	Up to 300 m outdoors, up to 50 m indoors
Environmental conditions for operation	+5°C to +45°C, 20% to 75% relative humidity
Dialling mode	DTMF (tone dialling)/ PD (pulse dialling)

Writing and editing text

The following rules apply when writing text:

- ◆ Multiple letters and characters are assigned to each key between **0...** and **9max** as well as *** *** and **# ...**.
- ◆ Control the cursor with    .
- ◆ Characters are inserted at the cursor position.
- ◆ Press the display key **Del.** to delete the **character** to the left of the cursor.
- ◆ The first letter of the name of directory entries is automatically capitalised, followed by lower case letters.

Setting upper/lower case or digits

Repeatedly press the hash key **# ...** to change the text input mode.

123	Digits
Abc	Upper case *
abc	Lower case

* First letter in capitals, all others in lower case

When the mode is changed, the active mode is indicated at the bottom left of the screen.

Writing names

- ▶ Enter the individual letters/characters by pressing the corresponding key.

The characters assigned to the key are shown in a selection line at the bottom left of the screen. The selected character is highlighted.

- ▶ **Briefly** press the key several times in succession to select the required letter/character.

Standard characters

	1x	2x	3x	4x	5x	6x	7x	8x	9x	10x	11x	12x	13x	14x	15x	16x
1 ...	1	€	£	\$	¥	¤										
2 max	a	b	c	2	ä	á	à	â	ã	ç						
3 max	d	e	f	3	ë	é	è	ê								
4 max	g	h	i	4	ï	í	ì	î								
5 max	j	k	l	5												
6 max	m	n	o	6	ö	ñ	ó	ò	ô	õ						
7 max	p	q	r	s	7	ß										
8 max	t	u	v	8	ü	ú	ù									
9 max	w	x	y	z	9	ÿ	ý	æ	ø	å						
0 ...	¹⁾	.	,	?	!	²⁾	←	0	+	-	:	;	‘	”	’	;
* ...	*	/	()	<	=	>	%								
# ...			#	@	\	&	§									

- 1) Space
- 2) Line break

Accessories

Compatibility

You can find more information about the handset functions in connection with the individual Gigaset bases at:

www.gigaset.com/compatibility

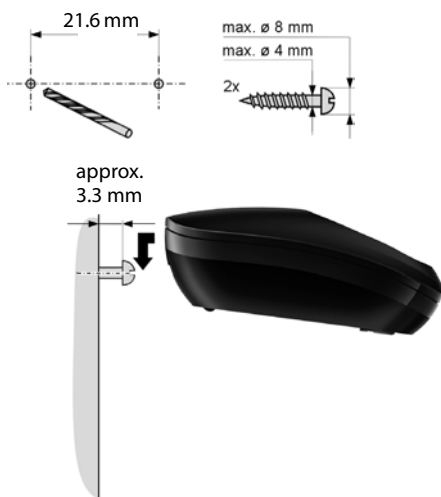
Ordering Gigaset products

All accessories and batteries are available from your phone retailer.



Use only original accessories. This will avoid possible health risks and personal injury, and also ensure that all the relevant regulations are complied with.

Mounting the charger on the wall



Index

A

- Accepting a call 23
- Accessories 41
- Acknowledge tones 33
- Activating
 - auto answer 31
 - flashing message key..... 28
 - handset 19
 - keypad lock 19
- Alarm clock 30
- Answering machine list
 - (dependent on base) 28
- Authorisation 35
- Auto answer 31
- Automatic
 - auto answer 23, 31

B

- Battery
 - charging 2, 3
 - display 2, 3
 - icon 2, 3
 - inserting 10
 - tone 33

C

- Call
 - ending 23
 - external 23
 - internal 24
- Call duration 23
- Calling
 - externally 23
 - internally 24
- Care of the telephone 39
- Changing
 - display language 12, 31
 - earpiece volume 31
 - handsfree volume..... 31
 - ringtone..... 32
- Character set 40
- Charge status indicator 2, 3
- Colour scheme 31
- Confirmation tone 33
- Contrast 31
- Control key 2, 17
- Correcting incorrect entries 17
- Customer Care 34

D

- Deactivating
 - auto answer 31
 - flashing message key..... 28
 - handset 19
 - keypad lock 19
- Delete key 4
- Deleting characters 17
- Dialling
 - using shortcut 26
 - with directory 25
- Digital clock 31
- Directory 25
 - copying number from text 27
 - managing entries 26
 - opening 17
 - order of entries 25
 - saving entry 25
 - saving first number 25
 - sending entry/list to handset 26
 - using to enter numbers 27
- Display
 - changing display language 12, 31
 - colour scheme 31
 - contrast 31
 - in idle status 15, 18
 - network mailbox message 29
 - screensaver 31
 - setting 31
- Display keys 2, 4
- Disposal 38

E

- Earpiece volume 31
- ECO DECT 30
- End call key 2, 23
- Ending a call 23
- Entry
 - saving (network mailbox) 29
 - selecting from directory 25
- Environment 38
- Error tone 33

F

- Fast access for the network mailbox 29

G

- General troubleshooting 35
- Group call 24
- Guarantee Certificate 36

H

- Handset
 - activating/deactivating 19
 - contact with liquid 39
 - de-registering 14
 - display language 12, 31
 - earpiece volume 31
 - handsfree volume 31
 - idle status 18
 - list 17
 - muting 24
 - registering 13
 - restoring to default settings 33
 - setting 31
 - setting up 10
- Handsfree mode 24
- Hash key 2, 19
- Hearing aids 7
- Help 35

I

- Icon
 - alarm clock 30
 - for new messages 27
 - keypad lock 19
 - ringtone 33
- Idle status
 - display 15, 18
 - returning to 18
- Incorrect entries (correction) 17

K

- Keypad lock 19
- Keys
 - assigning directory entry 26
 - control key 2, 17
 - delete key 4
 - display keys 2, 4
 - end call key 2, 23
 - hash key 2, 19
 - key 1 (quick dial) 2
 - message key 2
 - on/off key 2
 - recall key 2
 - shortcut 26
 - star key 2
 - talk key 2, 23

L

- Language, display 12, 31
- Liquid 39
- List
 - answering machine
 - (dependent on base) 28
 - handsets 17
 - network mailboxes 27
- Lock
 - activating/deactivating keypad lock . . 19

M

- Making calls
 - accepting a call 23
 - external 23
 - internal 24
- Manual redial 27
- Medical equipment 7
- Menu
 - end tone 33
 - tree 22
 - using 18
- Message key 2
 - activating/deactivating flashing 28
 - opening lists 27
- Microphone 2
- Muting the handset 24

N

- Network mailbox 29
- Night mode, see Time control
- Number
 - copying to directory 27
 - entering netw. mailbox number 29
 - entering with directory 27
 - saving in the directory 25

O

- On/Off key 2
- Order in directory 25

P

- Package contents 8
- Power adapter 7

Q

- Questions and answers 35

Index

R

Range	9
Recall key	2
Redial	27
Registering (handset)	13
Ringer	
setting melody	32
Ringtone	
changing	32
setting volume	32

S

Screen protection, see Screensaver	
Screensaver	31
Searching in directory	25
Sending	
directory entry to handset	26
Service	34
Setting	
date	14
melody (ringtone)	32
time	14
wake up time	30
Setting up	
base	9
handset	10
Shortcut	26
SMS (dependent on base)	
writing	40
Snooze mode	30
Sound, see Ringtone	
Specifications	39
Star key	2

T

Talk key	2, 23
Time control (night mode)	32

V

Viewing network mailbox message	29
Volume	
earpiece	31
handset handsfree volume	31
loudspeaker	31
ringtone	32

W

Writing and editing text	40
--------------------------------	----

Issued by

Gigaset Communications GmbH
Frankenstr. 2a, D-46395 Bocholt

© Gigaset Communications GmbH 2011

All rights reserved. Subject to availability.

Rights of modification reserved.

www.gigaset.com

This user guide is made from 100% recycled paper.



A31008 - M2252 - R101 - 2 - 4N19