

EN	Dear Customer, Gigaset Communications GmbH is the legal successor to Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), which in turn continued the Gigaset business of Siemens AG. Any statements made by Siemens AG or SHC that are found in the user guides should therefore be understood as statements of Gigaset Communications GmbH. We hope you enjoy your Gigaset.	DA	Kære Kunde, Gigaset Communications GmbH er retlig efterfølger til Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), som fra deres side videreførte Siemens AGs Gigaset-forretninger. Siemens AGs eller SHCs eventuelle forklaringer i betjeningsvejledningerne skal derfor forstås som Gigaset Communications GmbHs forklaringer. Vi håber, du får meget glæde af din Gigaset.
DE	Sehr geehrte Kundin, sehr geehrter Kunde, die Gigaset Communications GmbH ist Rechtsnachfolgerin der Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), die ihrerseits das Gigaset-Geschäft der Siemens AG fortführte. Etwaige Erklärungen der Siemens AG oder der SHC in den Bedienungsanleitungen sind daher als Erklärungen der Gigaset Communications GmbH zu verstehen. Wir wünschen Ihnen viel Freude mit Ihrem Gigaset.	FI	Arvoisa asiakkaamme, Gigaset Communications GmbH on Siemens Home and Office Communication Devices GmbH & Co. KG (SHC)-yhtiöksen oikeudenomistaja, joka jatkoj puolestaan Siemens AG:n Gigaset-liiketoimintaa. Käyttöoppaissa mahdollisesti esiintyvät Siemens AG:n tai SHC:n selosteet on tämän vuoksi ymmärrettävä Gigaset Communications GmbH:n selosteina. Toivotamme Teille paljon iloa Gigaset-laitteestanne.
FR	Chère Cliente, Cher Client, la société Gigaset Communications GmbH succède en droit à Siemens Home and Office Communication Devices GmbH & Co. KG (SHC) qui poursuivait elle-même les activités Gigaset de Siemens AG. Donc les éventuelles explications de Siemens AG ou de SHC figurant dans les modes d'emploi doivent être comprises comme des explications de Gigaset Communications GmbH. Nous vous souhaitons beaucoup d'agrément avec votre Gigaset.	SV	Kära kund, Gigaset Communications GmbH övertar rättigheterna från Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), som bedrev Gigaset-verksamheten efter Siemens AG. Alla förklaringar från Siemens AG eller SHC i användarhandboken gäller därför som förklaringar från Gigaset Communications GmbH. Vi önskar dig mycket nöje med din Gigaset.
IT	Gentile cliente, la Gigaset Communications GmbH è successore della Siemens Home and Office Communication Devices GmbH & Co. KG (SHC) che a sua volta ha proseguito l'attività della Siemens AG. Eventuali dichiarazioni della Siemens AG o della SHC nei manuali d'istruzione, vanno pertanto intese come dichiarazioni della Gigaset Communications GmbH. Le auguriamo tanta soddisfazione con il vostro Gigaset.	NO	Kjære kunde, Gigaset Communications GmbH er rettslig etterfølger etter Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), som i sin tur videreførte Gigaset-geskjeften i Siemens AG. Eventuelle meddelelser fra Siemens AG eller SHC i bruksanvisningene er derfor å forstå som meddelelser fra Gigaset Communications GmbH. Vi håper du får stor glede av din Gigaset-enhet.
NL	Geachte klant, Gigaset Communications GmbH is de rechtsopvolger van Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), de onderneming die de Gigaset-activiteiten van Siemens AG heeft overgenomen. Eventuele uitspraken of mededelingen van Siemens AG of SHC in de gebruiksaanwijzingen dienen daarom als mededelingen van Gigaset Communications GmbH te worden gezien. Wij wensen u veel plezier met uw Gigaset.	EL	Αγαπητή πελάτισσα, αγαπητέ πελάτη, η Gigaset Communications GmbH είναι η νομική διάδοχος της Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), η οποία έχει αναλάβει την εμπορική δραστηριότητα Gigaset της Siemens AG. Οι δηλώσεις της Siemens AG ή της SHC στις οδηγίες χρήσης αποτελούν επομένως δηλώσεις της Gigaset Communications GmbH. Σας ευχόμαστε καλή διασκέδαση με τη συσκευή σας Gigaset.
ES	Estimado cliente, la Gigaset Communications GmbH es derechohabiente de la Siemens Home and Office Communication Devices GmbH & Co. KG (SHC) que por su parte continuó el negocio Gigaset de la Siemens AG. Las posibles declaraciones de la Siemens AG o de la SHC en las instrucciones de uso se deben entender por lo tanto como declaraciones de la Gigaset Communications GmbH. Le deseamos que disfrute con su Gigaset.	HR	Poštovani korisnici, Gigaset Communications GmbH pravni je sljednik tvrtke Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), koji je nastavio Gigaset poslovanje tvrtke Siemens AG. Zato sve izjave tvrtke Siemens AG ili SHC koje se nalaze u uputama za upotrebu treba tumačiti kao izjave tvrtke Gigaset Communications GmbH. Nadamo se da sa zadovoljstvom koristite svoj Gigaset uređaj.
PT	SCaros clientes, Gigaset Communications GmbH é a sucessora legal da Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), que, por sua vez, deu continuidade ao sector de negócios Gigaset, da Siemens AG. Quaisquer declarações por parte da Siemens AG ou da SHC encontradas nos manuais de utilização deverão, portanto, ser consideradas como declarações da Gigaset Communications GmbH. Desejamos que tenham bons momentos com o seu Gigaset.	SL	Spoštovani kupec! Podjetje Gigaset Communications GmbH je pravni naslednik podjetja Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), ki nadaljuje dejavnost znamke Gigaset podjetja Siemens AG. Vse izjave podjetja Siemens AG ali SHC v priložnikih za uporabnike torej veljajo kot izjave podjetja Gigaset Communications GmbH. Želimo vam veliko užitkov ob uporabi naprave Gigaset.

- CS** Vážení zákazníci,
společnost Gigaset Communications GmbH je právním nástupcem společnosti Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), která dále přejala segment produktů Gigaset společnosti Siemens AG. Jakékoli prohlášení společnosti Siemens AG nebo SHC, které naleznete v uživatelských příručkách, je třeba považovat za prohlášení společnosti Gigaset Communications GmbH. Doufáme, že jste s produkty Gigaset spokojeni.
- SK** Vážený zákazník,
Spoločnosť Gigaset Communications GmbH je právnym nástupcom spoločnosti Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), ktorá zasa pokračovala v činnosti divízie Gigaset spoločnosti Siemens AG. Z tohto dôvodu je potrebné všetky vyhlásenia spoločnosti Siemens AG alebo SHC, ktoré sa nachádzajú v používateľských príručkách, chápať ako vyhlásenia spoločnosti Gigaset Communications GmbH. Veríme, že budete so zariadením Gigaset spokojní.
- RO** Stimatе client,
Gigaset Communications GmbH este succesorul legal al companiei Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), care, la rândul său, a continuat activitatea companiei Gigaset a Siemens AG. Orice afirmații efectuate de Siemens AG sau SHC și incluse în ghidurile de utilizare vor fi, prin urmare, considerate a aparține Gigaset Communications GmbH.
Sperăm ca produsele Gigaset să fie la înălțimea dorințelor dvs.
- SR** Poštovani potrošaču,
Gigaset Communications GmbH je pravni naslednik kompanije Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), kroz koju je nastavljeno poslovanje kompanije Gigaset kao dela Siemens AG. Stoga sve izjave od strane Siemens AG ili SHC koje se mogu naći u korisničkim uputstvima treba tumačiti kao izjave kompanije Gigaset Communications GmbH.
Nadamo se da ćete uživati u korišćenju svog Gigaset uređaja.
- BG** Уважаеми потребители,
Gigaset Communications GmbH е правоприемникът на Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), която на свой ред продължи бизнеса на подразделението Siemens AG. По тази причина всякакви изложения, направени от Siemens AG или SHC, които се намират в ръководствата за потребителя, следва да се разбират като изложения на Gigaset Communications GmbH.
Надяваме се да ползвате с удоволствие вашия Gigaset.
- HU** Tisztelt Vásárló!
A Siemens Home and Communication Devices GmbH & Co. KG (SHC) törvényes jogutódja a Gigaset Communications GmbH, amely a Siemens AG Gigaset üzletágának utódja. Ebből következően a Siemens AG vagy az SHC felhasználói kézikönyveiben található bármely kijelentést a Gigaset Communications GmbH kijelentésének kell tekinteni.
Reméljük, megelégedéssel használja Gigaset készülékét.
- PL** Szanowny Kliencie,
Firma Gigaset Communications GmbH jest spadkobiercą prawnym firmy Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), która z kolei przejęła segment produktów Gigaset od firmy Siemens AG. Wszelkie oświadczenia firm Siemens AG i SHC, które można znaleźć w instrukcjach obsługi, należy traktować jako oświadczenia firmy Gigaset Communications GmbH.
Życzymy wiele przyjemności z korzystania z produktów Gigaset.
- TR** Sayın Müşterimiz,
Gigaset Communications GmbH, Siemens AG'nin Gigaset işletmesini yürüten Siemens Home and Office Communication Devices GmbH & Co. KG (SHC)'nin yasal halefidir. Kullanma kılavuzlarında bulunan ve Siemens AG veya SHC tarafından yapılan bildiriler Gigaset Communications GmbH tarafından yapılmış bildiriler olarak algılanmalıdır.
Gigaset'ten memnun kalmanızı ümit ediyoruz.
- RU** Уважаемые покупатель!
Компания Gigaset Communications GmbH является правопреемником компании Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), которая, в свою очередь, приняла подразделение Gigaset в свое управление от компании Siemens AG. Поэтому любые заявления, сделанные от имени компании Siemens AG или SHC и встречающиеся в руководствах пользователя, должны восприниматься как заявления компании Gigaset Communications GmbH.
Мы надеемся, что продукты Gigaset удовлетворяют вашим требованиям.

SIEMENS



Gigaset A58H

 
Issued by
Siemens Home and Office Communication Devices GmbH & Co. KG
Schlavenhorst 66
D-46395 Bocholt

© Siemens Home and Office Communication Devices GmbH & Co. KG 2008
All rights reserved. Subject to availability.
Rights of modification reserved.

www.siemens.com/gigaset

Gigaset

The handset at a glance

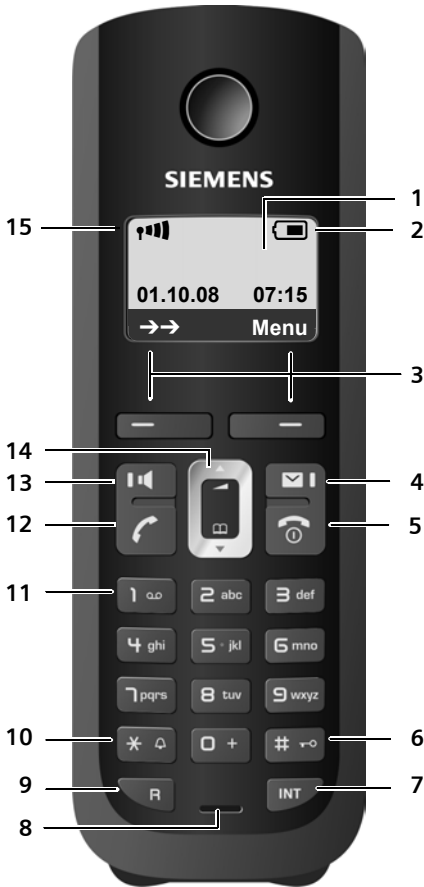

- 1 **Display** in idle status (example)
- 2 **Charge status of the batteries** (→ page 9)
- 3 **Display keys** (→ page 14)
- 4 **Message key** (→ page 22)
Access to calls and message lists;
Flashes: new message or new call
- 5 **End call key, On/Off key**
End call, cancel function, go back one menu level (press briefly), back to idle status (press and hold), activate/deactivate handset (press and hold in idle status)
- 6 **Hash key**
Keypad lock on/off (press and hold in idle status);
toggles between upper/lower case and digits
- 7 **Internal key**
Make an internal call (→ page 20)
- 8 **Microphone**
- 9 **Recall key**
- Consultation call (flash)
- Insert a dialling pause (press and hold)
- 10 **Star key**
Ringer melody on/off (press and hold),
With an open connection: Switch between dial pulsing/touch tone dialling (press briefly)
- 11 **Key 1**
Dial answer machine (depending on the base station)/network mailbox (press and hold)
- 12 **Talk key**
Answer a call, open last number redial list (press briefly), start dialling (press and hold)
- 13 **Handsfree key**
Switch between earpiece and handsfree mode;
Lights up: handsfree activated
Flashes: incoming call
- 14 **Control key** (→ page 14)
- 15 **Signal strength** (→ page 9)

Contents

- The handset at a glance** 1
- Safety precautions** 4
- First steps** 5
 - Check the package contents 5
 - Setting up the charging cradle 5
 - Connecting the charging cradle 6
 - Setting up the handset for use 7
 - What would you like to do next? 13
- Using the phone** 14
 - Control key 14
 - Display keys 14
 - Keys on the keypad 15
 - Correcting incorrect entries 15
 - Menu guidance 15
 - Activating/deactivating the handset 16
 - Activating/deactivating the keypad lock 16
 - Illustration of operating steps in the user guide 17
- Menu tree** 18
- Making calls** 19
 - Making an external call 19
 - Ending a call 19
 - Answering a call 19
 - Handsfree talking 19
 - Muting 19
 - Making internal calls 20
- Using the directory and lists** 20
 - Directory 20
 - Last number redial list 22
 - Opening lists with the message key 22
- ECO DECT** 22
- Setting the alarm clock** 23
- Handset settings** 23
 - Changing date and time 23
 - Changing the display language 23
 - Setting the display 23
 - Activating/deactivating auto answer 23
 - Changing the handsfree/earpiece volume 24
 - Changing ringer 24
 - Advisory tones 25
 - Restoring the handset default settings 25

Service (Customer Care)	26
Questions and answers	26
Authorisation	27
Guarantee Certificate	
United Kingdom	27
Guarantee certificate Ireland	28
Environment	29
Appendix	30
Care	30
Contact with liquid	30
Specifications	30
Writing and editing text	31
Accessories	32
Mounting the charging cradle to the wall	32
Index	33

Safety precautions

Warning

Read the safety precautions and the user guide before use.

Explain their contents and the potential hazards associated with using the telephone to your children.



Only use the mains adapter supplied, as indicated on the underside of the charger.



Only use the **recommended, rechargeable batteries** (→ page 30), i.e. never use a conventional (non-rechargeable) battery or other battery types as this could result in significant health risks and personal injury.



The operation of medical appliances may be affected. Be aware of the technical conditions in your particular environment, e.g. doctor's surgery.



Do not hold the rear of the handset to your ear when it is ringing or when the handsfree function is activated. Otherwise you risk serious and permanent damage to your hearing.

The handset may cause an unpleasant humming noise in hearing aids.



Do not install the charging cradle in bathrooms or shower rooms. The charging cradle is not splashproof (→ page 30).



Do not use your phone in environments with a potential explosion hazard (e.g. paint shops).



If you give your Gigaset to someone else, make sure you also give them the user guide.

Please note

Not all of the functions described in this user guide are available in all countries.

First steps

Check the package contents



- 1 one Gigaset A58H handset,
- 2 one charging cradle,
- 3 one mains adapter,
- 4 two batteries,
- 5 one battery cover,
- 6 one user guide.

Setting up the charging cradle

The charging cradle is designed to be operated in enclosed, dry areas at temperatures ranging from +5 °C to +45 °C.

- ▶ Set up the charging cradles at a central location on a flat, non-slip surface in your house or apartment.

Please note

Pay attention to the range of the base station.

This is up to 300 m in unobstructed outdoor areas and up to 50 m inside buildings. The range is reduced when Eco Mode (→ page 22) is activated.

The phone's feet do not usually leave any marks on surfaces. However, due to the multitude of different varnishes and polishes used on today's furnishings, the occurrence of marks on the surfaces cannot be completely ruled out.

 
First steps

For instructions on how to mount the charging cradle to a wall, please see → page 32.

Please note:


- ◆ Never expose the telephone to the influence of heat sources, direct sunlight or other electrical devices.
- ◆ Protect your Gigaset from moisture, dust, corrosive liquids and vapours.

Connecting the charging cradle

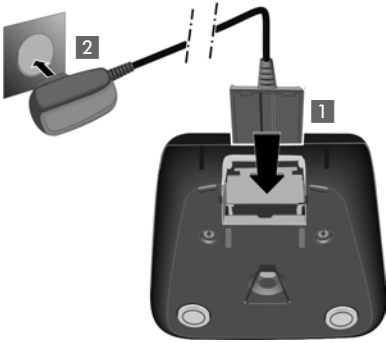

- ▶ Connect the flat plug of the mains adapter **1**.
- ▶ Plug the mains adapter into the plug socket **2**.

 If you need to disconnect the plug from the charging cradle, press the release button **1** and disconnect the plug **2**.

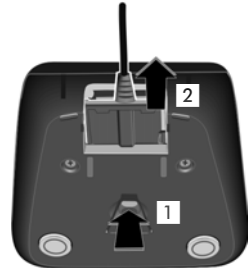

Setting up the handset for use



 
The display is protected by a plastic film. **Please remove the protective film!**

Inserting the batteries and closing the battery cover

Warning

Use only the rechargeable batteries (→ page 30) recommended by Siemens. Never use conventional (non-rechargeable) batteries as this could result in significant health risks and personal injury. For example, the outer casing of the batteries could be destroyed or the batteries could explode. The phone could also malfunction or be damaged as a result of using batteries that are not of the recommended type.

- ▶ Insert the batteries the right way round. The polarity is indicated in/on the battery compartment.

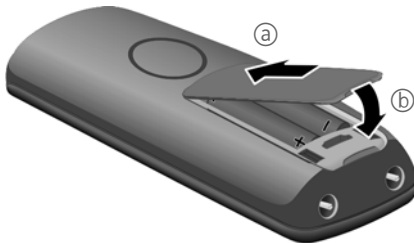

- ▶ First insert the battery cover at the top **a**.
- ▶ Then press the cover **b** until it clicks into place.

If you need to open the battery cover, for instance to replace the batteries, place your fingertip in the cavity on the casing and pull the battery cover upwards.



 
Registering the handset to the base station

Before you can use the phone, you must first register the handset to the base station. The actual registration procedure will depend on the type of base station.

Automatically register the A58H handset to the Gigaset A580/A585 base station



- ▶ Place the handset with the **display facing up** in the base station.

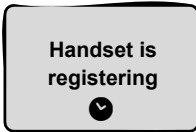

The handset registers automatically. Registration can take **up to 5 minutes**. **Do not remove the handset from the base station during this time.**

Please note

- ◆ Each key press interrupts the automatic registration.
- ◆ If automatic registration does not work, the handset will have to be registered manually.

Manually registering the A58H handset

You must activate manual registration of the handset **on both the handset and the base station**.

 
On the handset:

Menu → **Settings** → **Handset** → **Register Handset**

(If you require further information on the illustration of these operating steps, please see → page 17.)



Enter the system PIN of the base station (the default is 0000) and press **OK**.

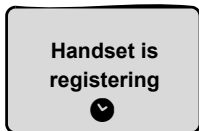

The registration screen is displayed.

On the base station:

Within 60 sec. press and **hold** the registration/paging key on the base station (approx. 3 sec.).

The following is displayed after successful automatic or manual handset registration:

- ◆ the strength of the reception signal between base station and handset:
 - good to poor:
 - no reception:
- ◆ battery charge status:
 - (flat to full)
 - flashes: batteries almost flat
 - flashes: charging procedure

The handset is assigned the lowest unassigned internal number (1–4). If more than one handset is registered to the base station, the internal handset number appears on the display, e.g. INT 2. If the internal numbers 1–4 are already assigned to other devices, the number 4 will be overwritten.

To charge the batteries, leave the handset in the base station/charging cradle.

Please note

Only place the handset in the base station or charging cradle that is intended for it.

Should you have any questions and problems → page 26.

Initial charging and discharging of the batteries

The correct charge level can only be displayed if the batteries are first fully charged **and** discharged.



- ▶ Place the handset in the base station or charging cradle for **ten** hours.



- ▶ Then remove the handset from the base station or charging cradle and do not replace it until the batteries are completely discharged.

Please note

- ◆ After the first battery charge **and** discharge you may replace your handset in its base station or charging cradle after every call.
- ◆ Always repeat the charging and discharging procedure if you remove the batteries from the handset and reinsert them.
- ◆ The batteries may warm up during charging. This is not dangerous.
- ◆ After a while, the charge capacity of the batteries will decrease for technical reasons.

Setting the date and time

Set the date and time so that the correct date and time can be assigned to incoming calls, and so that the alarm can be used.



- ▶ Press the key below **Menu** on the display screen to open the main menu.



- ▶ Press the bottom of the control key ...



... until the **Settings** menu item appears.


- ▶ Press the key below **OK** on the display screen to confirm your selection.



The **Date/Time** menu item appears on the display.

 
- ▶ Press the key below **OK** on the display screen to open the input field.



- ▶ The active line is marked [...]. Enter day, month and year as an 8-digit number via the handset, e.g.  for 01/10/2008.




If you want to correct an entry, press the top or bottom of the control key to toggle between fields.

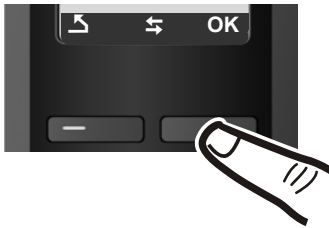


- ▶ Press the key below **OK** on the display screen to confirm your selection.




- ▶ Enter the hours and minutes as four digit numbers via the handset e.g.  for 07:15 am. If necessary, use the control key to toggle between fields.

 - ▶ Press the key below **OK** on the display screen to confirm your selection.

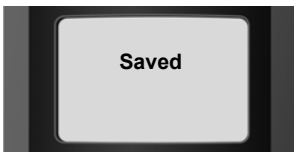

The display shows **Saved**. You will hear a confirmation tone.

 


- ▶ Press and hold the end call key  to return to the idle status.

Display in idle status

Once the phone is registered and the time set, the idle display is shown as in this example

Your phone is now ready for use.

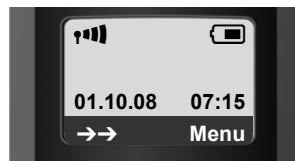

Please note

The range icon is only displayed in idle status if Eco Mode+ is deactivated (depending on the base station, see your phone's user guide).

What would you like to do next?

Now you have successfully started your Gigaset you will probably want to adapt it to your personal requirements. Use the following guide to quickly locate the most important subjects.


If you are unfamiliar with menu-driven devices such as other Gigaset telephones you should first read the section entitled "Using the phone" → page 14.

Information on is located here.
Setting the ringer melody and volume	▶ page 24
Setting the handset volume	▶ page 24
Setting Eco Mode / Eco Mode+	▶ page 22
Transferring directory entries from existing Gigaset handsets to the new handset(s)	▶ page 21

If you have any questions about using your phone, please read the tips on troubleshooting (→ page 26) or contact our Customer Care team (→ page 26).

Using the phone

Control key

In the following description the side of the control key you need to press for each operation is indicated accordingly, e.g.  for "press the top of the control key".

The control key has a number of different functions:



When the handset is in idle status



Open the directory.





Call up the menu for setting the handset's call volume (→ page 24), ringer melodies (→ page 24) and advisory tones (→ page 25).

In the main menu, in submenus and lists



Scroll up/down line by line.

In input fields

Use the control key to move the cursor to the left  or right .

During an external call



Open the directory.



Adjust the loudspeaker volume for earpiece and handsfree mode.

Display keys

 




The function of the display keys changes depending on the particular operating situation. Example:






Current display key functions are shown in the bottom display line.

Display keys

Important display keys:

-  **Menu** Open a context-dependent menu.
-  **OK** Confirm selection.
-  **<C** Delete key: deletes one character at a time from right to left.
-  **↶** Go back one menu level or cancel operation.
-  **→→** Open the last number redial list.

Keys on the keypad

 /  /  etc.


Press the matching key on the handset.



Enter digits or letters.

Correcting incorrect entries


You can correct incorrect characters in the text by navigating to the incorrect entry using the control key. You can then:

- ◆ press  to delete the character to the left of the cursor,
- ◆ insert characters to the left of the cursor,
- ◆ overwrite the (flashing) character when entering the time and date etc.

Menu guidance



Your telephone's functions are accessed using a menu that has a number of levels.

Main menu (first menu level)

- ▶ When the handset is in idle status, press  to open the main menu

The main menu functions are shown on the display as a list with name and icon.



To access a function, i.e. to open the corresponding submenu (next menu level):

- ▶ Navigate to the function using the control key . Press the display key .

Submenus

 
The functions in the submenus are displayed as lists.

To access a function:

- ▶ Scroll to the function with the control key  and press .


Or:

- ▶ Enter the corresponding digit combination (→ page 18).

Briefly press the end call key  once to return to the previous menu level/cancel the operation.

Reverting to idle status

You can revert to idle status from anywhere in the menu as follows:

- ▶ Press and **hold** the end call key .

Or:

- ▶ Do not press any key: after 2 minutes the display will **automatically** revert to idle status.

Any settings you have not confirmed by pressing  will be discarded.

An example of the display in idle status is shown on → page 13.

Activating/deactivating the handset




With the phone in idle status, press and **hold** the end call key (confirmation tone) to switch off the handset.
Press and **hold** the end call key again to switch the handset on.

Activating/deactivating the keypad lock

The keypad lock prevents any inadvertent use of the phone.



Press and **hold** the hash key to activate or deactivate the keypad lock. You will hear the confirmation tone.

When the keypad lock is activated you will see the  icon on the display and a message when you press a key.

The keypad lock is deactivated automatically if someone calls you. It is reactivated when the call is finished.

Illustration of operating steps in the user guide

 
The operating steps are shown in abbreviated form.

Example:

The illustration:

Menu → **Settings** → **Handset** → **Auto Answer** (✓ = on)

means:

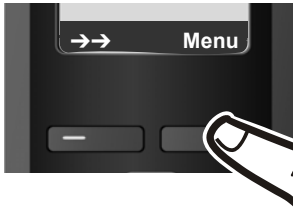

- ▶ Press the display key **Menu** to open the main menu.



- ▶ Press the bottom of the control key until the **Settings** menu item appears on the display.



- ▶ Press the bottom of the control key until the **Handset** menu item appears on the display.




- ▶ Press the bottom of the control key until the **Auto Answer** menu item appears on the display.
- ▶ Press the display key **OK** to activate/deactivate the function (✓ = on).

Menu tree

Instead of scrolling to locate a menu function, you can select a function more quickly by opening the menu and keying in a digit combination (or shortcut).


Example: **Menu**    for "Set ringer volume".

With the telephone in **idle status**, press **Menu** (open main menu):

1  **SMS (Menu dependent on base station)**

4  **Alarm Clock**

4-1	Activation	→ page 23
4-2	Wake up time	→ page 23

5  **Voice Mail (Menu dependent on base station)**


 
7  **Settings**

7-1	Date/Time	→ page 11
7-2	Audio Settings	7-2-1 Call Volume → page 24
		7-2-2 Ringer Volume → page 24
		7-2-3 Ringer Melody → page 24
		7-2-4 Advisory Tones → page 25
		7-2-5 Battery Low → page 25
7-3	Handset	7-3-1 Display → page 23
		7-3-2 Language → page 23
		7-3-3 Auto Answer → page 23
		7-3-4 Register Handset → page 8
		7-3-5 Reset Handset → page 25
7-4	Base	(Menu dependent on base station)



 
Making calls


Making an external call

External calls are calls using the public telephone network.

  Enter the number and press the talk key.

Or:

   Press and **hold** the talk key  and then enter the number.


You can cancel the dialling operation with the end call key .

You are shown the duration of the call while the call is in progress.


Please note

- ◆ Dialling with the directory (→ page 20) and last number redial list (→ page 22) saves repeated typing of numbers.
- ◆ You can assign a number from the directory to a key for speed dialling (→ page 21).

 

Ending a call

 Press the end call key.

Answering a call

The handset indicates an incoming call in three ways: by ringing, by a display on the screen and by the flashing handsfree key .

You can answer the call by:

- ▶ Pressing the talk key .
- ▶ Pressing the handsfree key .

If the handset is in the charging cradle and the Auto Answer function is activated (→ page 23), the handset automatically answers the call when you remove it from the charging cradle.



To deactivate the ringer, press the **Menu** display key and select **Silent**. You can take the call as long as it is displayed on the screen.

Handsfree talking

In handsfree mode, instead of holding the handset to your ear you can put it down, for example on the table in front of you. This allows others to participate in the call.


Activating/deactivating handsfree mode

Activating while dialling

  Enter the number and press the handsfree key.



- ▶ You should inform your caller before you use the handsfree function so that they know someone else is listening.

Switching between earpiece and handsfree mode

 Press the handsfree key.

Activate/deactivate handsfree during a call.

If you wish to place the handset in the charging cradle during a call:

- ▶ Press and hold the handsfree key  while placing the handset in the base station. If the handsfree key  does not light up, press the key again.

For instructions on how to adjust the loudspeaker volume (→ page 24).

Muting

You can deactivate the microphone in your handset during an external call.


Mute Press the display key to mute the handset.


On Press the display key to switch the microphone back on.

Making internal calls


Internal calls to other handsets registered on the same base station are free.

Calling other handsets


 Start internal call. The display shows **Insert INT No.**

 Enter the internal number of the receiving handset. The handset is called.

or:

 Press the display key. All handsets are called.

Ending a call

 Press the end call key.

Using the directory and lists


The options are:

- ◆ Directory
- ◆ Last number redial list
- ◆ Lists dependent on the base station (→ base station user guide).

Directory

You can save up to 150 numbers and corresponding names in the directory.

You can create a personalised directory for your own individual handset. However, you can send the list or individual entries to other handsets (→ page 21).

- ▶ With the handset in idle status, open the directory by pressing the  key.

Length of the entries

Number: max. 32 digits


Name: max. 16 characters


Please note

You can assign a number from the directory to a key for speed dialling → page 21.

Saving the first number in the directory


 → **Dir. empty New Entry?**


 Enter the number and press **OK**.

 Enter the name and press **OK**.

Saving the first number in the directory

 → **Menu** → **New Entry**

 Enter the number and press **OK**.

 Enter the name and press **OK**.

Order of directory entries

The directory entries are usually sorted in alphabetical order. Spaces and digits take first priority. The sort order is as follows:



1. Space
2. Digits (0–9)
3. Letters (alphabetical)
4. Other characters

To get round the alphabetical order of the entries, insert a space or a digit in front of the name. These entries will then move to the beginning of the directory.

Selecting a directory entry


 Open the directory.

You have the following options:

- ◆ Use  to scroll to the entry until the required name is selected.
- ◆ Enter the first character of the name, or scroll to the entry using  if required.

Dialling a number from the directory

 →  (Select entry)

 Press the talk key. The number is dialled.

Managing directory entries

 →  (Select entry)

Editing an entry

Menu → Edit Entry




Edit the number if required, and press **OK**.




Edit the name if required, and press **OK**.

Using other functions

Menu Press the display key.

The following functions can be selected with :

Use Number

Save or modify a saved number and then dial with  or save as a new entry; to do so, press **Menu** → **Copy to Directory** → **OK** after the number appears on the display.

Delete Entry

Delete a selected entry.

Send Entry

Send a single entry to a handset (→ page 21).

Delete List

Delete **all** directory entries.

Send List




Send complete list to a handset (→ page 21).

Shortcut

Assign the current entry for speed dial to a selected key.

Using speed dial keys

You can assign directory entries to the keys 0 and 2–9:



 →  (Select entry) → **Menu**
→ **Shortcut** →  (press the key you want to assign the number to)

To dial, press and **hold** the required speed dial key.

Sending the directory to another handset

Preconditions:

- ◆ The sending and receiving handsets must both be registered to the same base station.
- ◆ The other handset and the base station can send and receive directory entries.

 →  (Select entry) → **Menu** (open menu) → **Send Entry / Send List**



Enter the internal number of the receiving handset and press **OK**.

Successful transmission is acknowledged with the message **Entry copied.** You can transfer several individual entries one after the other by responding **OK** to the **Next entry?** prompt.

Please note:

- ◆ Entries with identical numbers are not overwritten on the receiving handset.
- ◆ The transfer is cancelled if the phone rings or if the memory of the receiving handset is full.

Copying a displayed number to the directory

You can copy numbers displayed in a list, e.g. the call history or the last number redial list, or in an SMS (depending on the base station) to the directory.

If you have CNIP, the first 16 characters of the transmitted name are copied to the **Enter Name** line.




A number is displayed:

Menu → **Copy to Directory**

▶ Complete the entry → page 20.

Using a number from the directory




In some operating situations you can open the directory to copy a number, for example. Your handset must be in the idle status.

-  Open the directory.
 -  Select entry.
 - OK** Press the display key.
- Select function with .



Last number redial list


The last number redial list contains the ten numbers last dialled with the handset (max. 32 numbers). If one of the numbers is in the directory, the corresponding name will be displayed.

Manual last number redial

-  Press the key **briefly**.
-  Select entry.
-  Press the talk key again. The number is dialled.

Managing entries in the last number redial list

-  Press the key **briefly**.
-  Select entry.
- Menu** Open menu.

The following functions can be selected with :

Use Number (as in the directory,
→ page 21)


Copy to Directory


Copy an entry to the directory
(→ page 20).

Delete Entry (as in the directory,
→ page 21)

Delete List (as in the directory, → page 21)

Opening lists with the message key

An advisory tone sounds as soon as a **new message** arrives in a list. The  key flashes (it goes off when the key is pressed). In **idle status**, the display shows an icon for the new message.

If you press the message key , you access the lists that contain new messages.

ECO DECT

You are helping to protect the environment with your Gigaset A58H.

Reduced energy consumption

Your telephone has an energy-saving adapter plug and uses less energy.

Reduced transmission power (depending on the base station)

The transmission power can only be reduced if your base station supports this function.

The transmission power of your telephone is reduced **automatically**:

- ◆ The handset's transmission power is reduced depending on the distance to the base station.
- ◆ The transmission power at the base station is reduced to virtually zero when only one handset is registered and is standing in the base station.

You can reduce the transmission power of the handset and base station even further by using Eco Mode or Eco Mode+. For further information, please see your phone's user guide.


Setting the alarm clock

Precondition: The date and time have already been set (→ page 11).

Activating/deactivating the alarm clock

Menu → Alarm Clock → Activation (✓ = on)

After you activate the alarm clock, the menu for setting the wake up time opens automatically (→ page 23).

If the alarm clock is set, the wake-up time appears with the  icon in the display instead of the date.

Setting the wake-up time.

Menu → Alarm Clock → Wake up time



Enter the wake-up time in hours and minutes, then press **OK**.

When the alarm clock rings...

Alarm repeat after 5 minutes

Snooze Press the display key or any key.

If you press **Snooze** three times, the alarm clock switches off for 24 hours.

Turning off the alarm clock for 24 hours

Off Press the display key.

Handset settings

Your handset is preconfigured, but you can change the settings to suit your individual requirements.


Changing date and time

To change the time, open the input field with:

Menu → Settings → Date/Time

Enter Date:

Enter the day, month and year in 8-digit format, e.g.

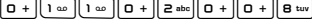

for 01/10/08.

Enter Time:

Enter hours and minutes as 4 digits, e.g.  for 07:15 a.m.

OK

Press the display key

Changing the display language

You can view the display texts in different languages.

Menu → Settings → Handset → Language

The current language is indicated by a ✓.



Select a language and press **OK**.



Press and **hold** (idle status).

If you accidentally choose a language you do not understand:

Menu 

Press keys in sequence.



Select the correct language and press **OK**.

Setting the display

You can display a digital clock when the handset is in idle status.


Menu → Settings → Handset → Display

You have the following options:

Screensaver

 
The available settings are **No Screensaver** or **Digital Clock**.

Activating/deactivating auto answer



When this function is activated, when a call arrives you can simply lift the handset out of the charging cradle without having to press the talk key .

Handset settings

Menu → Settings → Handset
→ Auto Answer (✓ = on)

 Press and **hold** (idle status).


Changing the handsfree/earpiece volume

You can adjust the volume for handsfree talking to one of five settings (1-5, e.g. volume 3 = ) and the earpiece volume to one of three (1-3, e.g. volume 2 = .

Setting the volume during a call

The setting applies to the current mode (earpiece or handsfree).

You are conducting an external call.


 Press the control key.

 Set the volume.

The setting will automatically be saved after approx. 3 seconds, if not then press the display key **OK**.

Adjusting the volume via the menu





Menu → Settings → Audio Settings
→ Call Volume → Earpiece Volume / Handsfree Volume

 Adjust the volume and press **OK**.

 Press and **hold** (idle status).

Changing ringer

◆ Volume:

Five volume levels (1–5; e.g. volume 3 =  ) and "crescendo" ring (6; volume increases with each ring =  .

◆ Melody:

List of pre-loaded ringer melodies. The first three melodies are the "classical" ringer melodies.

You can also set different ringer melodies for the following functions:

◆ External Calls: for external calls

◆ Internal Calls: for internal calls

◆ Alarm Clock: for the alarm clock

Setting the ringer volume


The ringer volume is the same for all types of ring.


Menu → Settings → Audio Settings
→ Ringer Volume

Or in idle status:

 → Ringer Volume

Then:

 Adjust the volume and press **OK**.


 Press and **hold** (idle status).


Setting the ringer melody

Set different ringer melodies for external calls, internal calls and the alarm clock.

Menu → Settings → Audio Settings
→ Ringer Melody

External Calls / Internal Calls / Alarm Clock
Select and press **OK**.



 Select melody (✓ = on) and press **OK**.

 Press and **hold** (idle status).


Activating/deactivating the ringer

You can turn off the ringer on your handset before you take a call or while the phone is in idle status. You can take a call so long as it is displayed on the screen.

Deactivating the ringer

 Press the star key **and hold**, until the  icon appears in the display.

Reactivating the ringer

 Press and **hold** the star key in idle status.

Advisory tones

Your handset uses advisory tones to tell you about different activities and statuses. The following tones can be activated and deactivated independently of each other:

◆ Advisory tones:

- **Key click:** every key press is confirmed.
- **Confirmation tone** (rising tone sequence): at the end of an entry/setting, when replacing the handset in the charging cradle and when an SMS is received (depending on the base station) or a new entry is made in the calls list.
- **Error tone** (descending tone sequence): when you make an incorrect entry.
- **Menu end tone:** when scrolling at the end of a menu.

◆ Battery low tone: the battery requires charging.

You cannot deactivate the confirmation tone for placing the handset in the charging cradle.

Activating/deactivating advisory tones

Menu → Settings → Audio Settings
→ Advisory Tones

Select and press **OK** (✓ = on).

Setting the battery low tone

Menu → Settings → Audio Settings
→ Battery Low

On / Off / During Call

Select and press **OK** (✓ = on).
The battery low tone is activated or deactivated or sounds during a call.

Restoring the handset default settings

You can reset individual settings and changes that you have made. This will not affect entries in the directory, calls list or SMS lists (depending on the base station), or the handset's registration to the base station.

Menu → Settings → Handset
→ Reset Handset

Confirm query with **OK** or reject it with **↵**.



Press and **hold** (idle status).

Service (Customer Care)

We offer you support that is fast and tailored to your specific needs!

Our Online Support on the Internet can be reached any time from anywhere.

<http://www.siemens.com/gigasetcustomer-care>

It provides you with 24/7 support for all our products. It also provides a list of FAQs and answers plus user guides and current software updates (if available for the product) for you to download.

You will also find frequently asked questions and answers in the appendix of this user guide.

For personal advice on our range of products and assistance with repairs or guarantee/warranty claims you can contact us on:

UK helpdesk: 0 84 53 67 08 12.

Ireland 18 50 77 72 77.

 
Please have your proof of purchase ready when calling with regard to guarantee/warranty claims.

Replacement or repair services are not offered in countries where our product is not sold by authorised dealers.

Questions and answers

If you have any questions about using your phone, visit us at www.siemens.com/gigasetcustomer-care at any time. The table below contains a list of common problems and possible solutions.

The display is blank.

1. The handset is not switched on.
 - ▶ Press **and hold** the end call key .
2. The batteries are flat.
 - ▶ Charge or replace the batteries (→ page 7).

"Base" flashes in the display.

1. The handset is outside the range of the base station.
 - ▶ Move the handset closer to the base station.
2. The base station's range is reduced because Eco Mode is activated (depending on the base station, please see your phone's user guide).
 - ▶ Deactivate Eco Mode or reduce the distance between the handset and the base station.
3. The base station is not turned on.
 - ▶ Check the base station mains adapter.

Handset does not ring.

1. The ringer is deactivated.
 - ▶ Activate the ringer (→ page 24).

The other party cannot hear you.

You have pressed the **Mute** display key. The handset is "muted".

- ▶ Activate the microphone again (→ page 19).

You hear an error tone (descending tone sequence) when inputting.

Action has failed/invalid input.

- ▶ Repeat the operation. Watch the display and refer to the user guide if necessary.

Authorisation

This device is intended for use within the European Economic Area and Switzerland. If used in other countries, it must first be approved nationally in the country in question.

Country-specific requirements have been taken into consideration.

We, Siemens Home and Office Communication Devices GmbH & Co. KG, declare that this device meets the essential requirements and other relevant regulations laid down in Directive 1999/5/EC.

A copy of the 1999/5/EC Declaration of Conformity is available at this Internet address:

<http://www.siemens.com/gigasetdocs>.

CE 0682

Guarantee Certificate United Kingdom

Without prejudice to any claim the user (customer) may have in relation to the dealer or retailer, the customer shall be granted a manufacturer's Guarantee under the conditions set out below:

- ◆ In the case of new devices and their components exhibiting defects resulting from manufacturing and/or material faults within 24 months of purchase, Siemens shall, at its own option and free of charge, either replace the device with another device reflecting the current state of the art, or repair the said device. In respect of parts subject to wear and tear (including but not limited to, batteries, keypads, casing), this warranty shall be valid for six months from the date of purchase.
- ◆ This Guarantee shall be invalid if the device defect is attributable to improper treatment and/or failure to

comply with information contained in the user guides.

- ◆ This Guarantee shall not apply to or extend to services performed by the authorised dealer or the customer themselves (e. g. installation, configuration, software downloads). User guides and any software supplied on a separate data medium shall be excluded from the Guarantee.
- ◆ The purchase receipt, together with the date of purchase, shall be required as evidence for invoking the Guarantee. Claims under the Guarantee must be submitted within two months of the Guarantee default becoming evident.
- ◆ Ownership of devices or components replaced by and returned to Siemens shall vest in Siemens.
- ◆ This Guarantee shall apply to new devices purchased in the European Union. For Products sold in the United Kingdom the Guarantee is issued by: Siemens Home and Office Communication Devices GmbH & Co. KG, Schlavenhorst 66, D-46395 Bocholt, Germany.
- ◆ Any other claims resulting out of or in connection with the device shall be excluded from this Guarantee. Nothing in this Guarantee shall attempt to limit or exclude a Customers Statutory Rights, nor the manufacturer's liability for death or personal injury resulting from its negligence.
- ◆ The duration of the Guarantee shall not be extended by services rendered under the terms of the Guarantee.
- ◆ Insofar as no Guarantee default exists, Siemens reserves the right to charge the customer for replacement or repair.
- ◆ The above provisions does not imply a change in the burden of proof to the detriment of the customer.

To invoke this Guarantee, please contact the Siemens telephone service. The relevant number is to be found in the accompanying user guide.

Guarantee certificate Ireland

Without prejudice to any claim the user (customer) may have in relation to the dealer or retailer, the customer shall be granted a manufacturer's Guarantee under the conditions set out below:

- ◆ In the case of new devices and their components exhibiting defects resulting from manufacturing and/or material faults within 24 months of purchase, Siemens shall, at its own option and free of charge, either replace the device with another device reflecting the current state of the art, or repair the said device. In respect of parts subject to wear and tear (including but not limited to, batteries, keypads, casing), this warranty shall be valid for six months from the date of purchase.
- ◆ This Guarantee shall be invalid if the device defect is attributable to improper care or use and/or failure to comply with information contained in the user manuals. In particular claims under the Guarantee cannot be made if:
 - ◆ The device is opened (this is classed as third party intervention)
 - ◆ Repairs or other work done by persons not authorised by Siemens.
 - ◆ Components on the printed circuit board are manipulated
 - ◆ The software is manipulated
 - ◆ Defects or damage caused by dropping, breaking, lightning or ingress of moisture. This also applies if defects or damage was caused by mechanical, chemical, radio interference or thermal factors (e.g.: microwave, sauna etc.)
 - ◆ Devices fitted with accessories not authorised by Siemens
 - ◆ This Guarantee shall not apply to or extend to services performed by the authorised dealer or the customer themselves (e.g. installation, configuration, software downloads). User manuals and any software supplied on

a separate data medium shall be excluded from the Guarantee.

- ◆ The purchase receipt, together with the date of purchase, shall be required as evidence for invoking the Guarantee. Claims under the Guarantee must be submitted within two months of the Guarantee default becoming evident.
- ◆ Ownership of devices or components replaced by and returned to Siemens shall vest in Siemens.
- ◆ This Guarantee shall apply to new devices purchased in the European Union. For Products sold in the Republic of Ireland the Guarantee is issued by Siemens Home and Office Communication Devices GmbH & Co. KG, Schlavenhorst 66, D-46395 Bocholt, Germany.
- ◆ Any other claims resulting out of or in connection with the device shall be excluded from this Guarantee. Nothing in this Guarantee shall attempt to limit or exclude a Customers Statutory Rights, nor the manufacturer's liability for death or personal injury resulting from its negligence.
- ◆ The duration of the Guarantee shall not be extended by services rendered under the terms of the Guarantee.
- ◆ Insofar as no Guarantee default exists, Siemens reserves the right to charge the customer for replacement or repair.
- ◆ The above provisions does not imply a change in the burden of proof to the detriment of the customer.

To invoke this Guarantee, please contact the Siemens helpdesk on 1850 777 277. This number is also to be found in the accompanying user guide.

Environment

Our environmental mission statement

We at Siemens Home and Office Communication Devices GmbH & Co. KG carry social responsibility and are actively engaged in the interests of a better world. Our ideas, technologies and actions serve people, society and the environment. The aim of our global activity is to secure sustainable life resources for humanity. We are committed to a responsibility for our products that comprises their entire life cycle. The environmental impact of products, including their manufacture, procurement, distribution, use, service and disposal, are already evaluated during product and process design.

Further information on environmentally friendly products and processes is available on the Internet under qiqaset.siemens.com.

Environmental management system



Siemens Home and Office Communication Devices is certified pursuant to the international standards EN 14001 and ISO 9001.

ISO 14001 (Environment): certified since September 2007 by TÜV SÜD Management Service GmbH.

ISO 9001 (Quality): certified since 17/02/1994 by TÜV Süd Management Service GmbH.

Ecological energy consumption

The use of ECO DECT (→ page 22) saves energy and is an active contribution towards protecting the environment.

Disposal

Batteries should not be disposed of in general household waste. Observe the local waste disposal regulations, details of which can be obtained from your local authority or the dealer you purchased the product from.

All electrical and electronic products should be disposed of separately from the municipal waste stream via designated collection facilities appointed by the government or the local authorities.



This crossed-out wheeled bin symbol on the product means the product is covered by the European Directive 2002/96/EC.

The correct disposal and separate collection of your old appliance will help prevent potential negative consequences for the environment and human health. It is a precondition for reuse and recycling of used electrical and electronic equipment.

For more detailed information about disposal of your old appliance, please contact your local council refuse centre or the original supplier of the product.

Appendix

Care

- ▶ Wipe the charging cradle and the handset with a **damp** cloth (do not use solvent) or an antistatic cloth.

Never use a dry cloth. This can cause static.

Contact with liquid

If the handset should come into contact with liquid:

1. **Turn the handset off and remove the batteries immediately.**
2. Allow the liquid to drain from the handset.
3. Pat all parts dry, then place the handset with the battery compartment open and the keypad facing down in a dry, warm place **for at least 72 hours** (**not** in a microwave, oven etc.).
4. **Do not switch on the handset again until it is completely dry.**

When it has fully dried out, you will normally be able to use it again.

Specifications

Recommended batteries

Technology:

Nickel-metal-hydride (NiMH)

Size: AAA (Micro, HR03)

Voltage: 1.2 V

Capacity: 550–1000 mAh

We recommend the following battery types, because these are the only ones that guarantee the specified operating times, full functionality and long service life:

- ◆ GP 700 mAh
- ◆ Yuasa Phone 700 mAh

- ◆ Yuasa Phone 800 mAh
- ◆ Yuasa AAA 800
- ◆ Peacebay 600 mAh

The device is supplied with two recommended batteries.

Handset operating times/charging times

The operating time of your Gigaset depends on the capacity and age of the batteries and the way they are used. (All times are maximum possible times)



	Capacity (mAh) approx.			
	550	650	800	1000
Standby time (hours)	180	210	265	330
Talktime (hours)	23	25	33	41
Operating time for 1.5 hrs of calls per day (hours)	80	95	115	145
Charging time, base station (hours)	8	10	12	15
Charging time, charging cradle (hours)	6	7	9	11

At the time of going to print, batteries up to 800 mAh were available and had been tested in the system. Due to the constant progression in battery development, the list of recommended batteries in the FAQ section of the Gigaset Customer Care pages is regularly updated:

www.siemens.com/gigasetcustomercare

Writing and editing text


 
 
 


 



 

 
 
 
The following rules apply when writing text:

- ◆ Use   to move the cursor to the left or right.
- ◆ Characters are inserted to the left of the cursor.
- ◆ The first letter of the name of directory entries is automatically capitalised, followed by lower case letters.

Writing an SMS (depending on the base station)/name

Press the relevant key several times to enter the corresponding letters/characters.



Standard characters

	1x	2x	3x	4x	5x	6x	7x	8x	9x	10x	11x	12x	13x	14x
				1	€	£	\$	¥	□					
	a	b	c	2	ä	á	à	â	ã	ç				
	d	e	f	3	ë	é	è	ê						
	g	h	i	4	ï	í	ì	î						
	j	k	l	5										
	m	n	o	6	ö	ñ	ó	ò	ô	õ				
	p	q	r	s	7	ß								
	t	u	v	8	ü	ú	ù	û						
	w	x	y	z	9	ÿ	ý	æ	ø	å				
	.	,	?	!	0	+	-	:	¿	¡	"	'	;	_
	*	/	()	<	=	>	%						
			#	@	\	&	§							

- 1) Space
- 2) Line break

When you press and **hold** a key, the characters of that key appear in the display and are highlighted one after the other. When you release the key, the highlighted character is inserted into the input field.

 Setting upper/lower case or digits

Press the hash key  **briefly** to switch from "Abc" mode to "123" and from "123" to "abc" and from "abc" to "Abc" (upper case: 1st letter upper case, all others lower case). Press the hash key  **before** entering the letter.

You can see briefly in the display whether upper case, lower case or digits is selected.

Accessories

 
 
Ordering Gigaset products

You can order Siemens Gigaset products from your specialist retailer.



Only use original accessories. This will avoid possible health risks and damage to property, and also ensure that all the relevant regulations are complied with.

Mounting the charging cradle to the wall

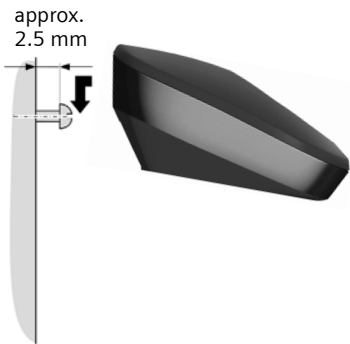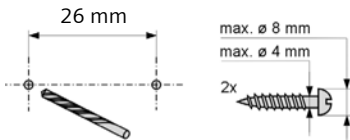

Index

A

- Accepting a call 19
- Accessories 32
- Activating
 - advisory tones 25
 - call acceptance 23
 - handset 16
 - keypad lock 16
- Advisory tones 25
- Alarm clock 23
- Alarm repeat 23
- Authorisation 27
- Auto answer 19, 23

B

- Base station
 - setting up 5
- Battery
 - charging 1, 10
 - display 1
 - icon 1, 9
 - inserting 7
 - recommended batteries 30
 - warning tone 25

C

- Call
 - accepting 19
 - ending 19
 - external 19
 - internal 20
- Call acceptance 23
- Call duration 19
- Calling
 - external 19
 - internal 20
- Care of the telephone 30
- Changing
 - earpiece volume 24
 - handsfree volume 24
- Character set 31
- Charge status display 1
- Confirmation tone 25
- Control key 1, 14
- Correcting incorrect entries 15
- Customer Care 26

D

- Deactivating
 - advisory tones 25
 - call acceptance 23
 - handset 16
 - keypad lock 16
- Delete key 14
- Deleting characters 15
- Dialling
 - directory 20
 - with speed dial 21
- Dialling pause
 - entering 1
- Digital clock 23
- Directory
 - copying number 22
 - copying number from text 21
 - managing entries 21
 - opening 14
 - order of entries 20
 - saving entry 20
 - saving the first number 20
 - sending entry/list to handset 21
- Display
 - changing display language 23
 - in idle status 15
 - keys 14
 - screensaver 23
 - setting 23
- Display keys 1
- Disposal 29

E

- Earpiece mode 19
- Earpiece volume 24
- ECO DECT 22
- End call key 1, 19
- Ending a call 19
- Ending, see Deactivate
- Entry
 - selecting from directory 20
- Environment 29
- Error tone 25

G

- General troubleshooting 26
- Guarantee Certificate 27, 28

Index

H

Handset	
activating/deactivating	16
advisory tones	25
contact with liquid	30
display language	23
earpiece volume	24
handsfree volume	24
idle status	15
muting	19
restoring to factory settings	25
setting	23
setting up	7
Handsfree key	1
Handsfree talking	19
Hash key	1, 16
Hearing aids	4
Help	26

I

Icon	
battery	9
display	14
for new messages	22
keypad lock	16
Idle status	
display	15
returning to	15
Incorrect input (correction)	15
Installing, base station	5
Internal	
call	20
key	1
making calls	20

K

Key 1 (fast access)	1
Key click	25
Keypad lock	16
Keys	
assigning directory entry	21
control key	1, 14
delete key	14
display keys	1, 14
end call key	1, 19
fast access	1
handsfree key	1
hash key	1, 16
internal key	1
message key	1

on/off key	1
recall key	1
speed dial	21
star key	1, 24
talk key	1, 19

L

Last number redial	22
Lock	
activating/deactivating keypad lock	16

M

Mains adapter	4
Making calls	
answering a call	19
external	19
internal	20
Manual last number redial	22
Medical appliances	4
Menu	
end tone	25
overview	18
prompting	15
Message key	1
opening lists	22
Microphone	1
Muting the handset	19

N

Number	
copying from directory	22
copying to directory	21
entering with directory	22
saving in the directory	20

O

On/Off key	1
Order in directory	20

P

Pack contents	5
---------------	---

Q

Questions and answers	26
-----------------------	----

R

Range	5
Recall key	1
Ringer	
changing	24
setting melody	24
setting volume	24

S

- Screen protection, see Screensaver
- Screensaver 23
- Searching in directory 20
- Sending
 - directory entry to handset 21
- Service 26
- Setting
 - date 11, 23
 - melody (ringer) 24
 - time 11, 23
 - wake up time 23
- Setting up
 - handset 7
- Shortcut 18
- SMS
 - writing 31
- Snooze (alarm clock) 23
- Specifications 30
- Speed dial 21
- Star key 1, 24

T

- Talk key 1, 19

V

- Volume
 - earpiece volume 24
 - handset handsfree volume 24
 - ringer 24

W

- Warning tone (battery) 25
- Writing and editing text 31